 




# MORRIS

## COFFEE MAKER INSTRUCTION MANUAL

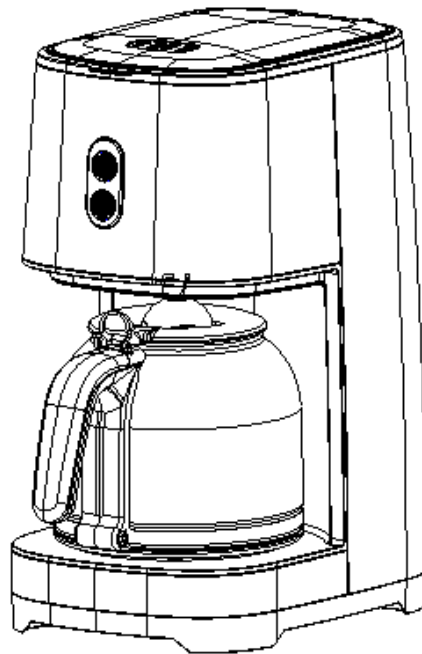

MODELS:  
R20801CMC / R20802CMG  
R20804CMB / R20821CMK

Read this manual thoroughly before using and save it for future reference.  
Pictures in this manual are only for reference.

 
## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Do not set a hot carafe on a hot or cold surface.
17. Do not let the coffee maker operate without water.

18. Do not use a cracked carafe or a carafe having a loose or weakened handle.
19. Make sure the carafe is placed on the warming plate correctly during the brewing.
20. To reduce the risk of fire or electrical shock, do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
21. The carafe is designed for use with this appliance. It must never be used on a range top.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
23. Children should be supervised to ensure that they do not play with the appliance.
24. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
25. Save these instructions.

## KNOW YOUR COFFEE MAKER

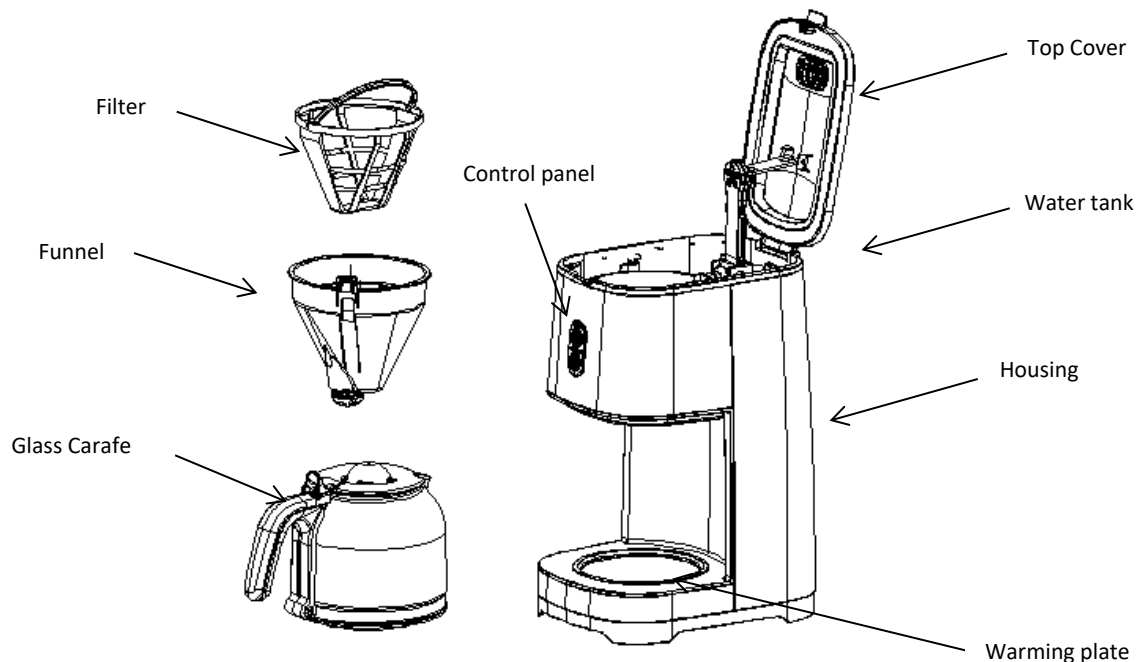

## CONTROL PANEL

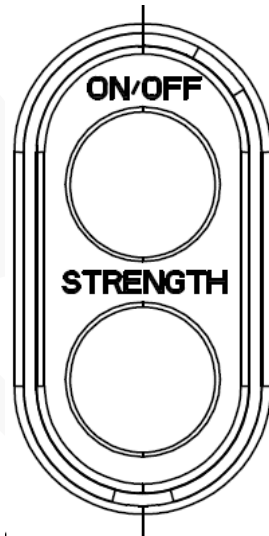 

### BEFORE THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Fill water into water tank to the “12” level and brew water for several times without coffee powder, then discard the water. Clean and dry all detachable parts thoroughly according to the section “CLEANING AND MAINTENANCE” .

### USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with drinking water. The water level should not exceed “12” level as indicated on the water level gauge.
2. Place the funnel into the funnel support of coffee maker, make sure it is fit correctly, otherwise the top cover cannot be closed in place appropriately. Place a filter or filter paper into the funnel.
3. Add coffee powder into the filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top cover completely.
4. Insert the glass carafe with the lid closed onto the warming plate horizontally.
5. Press the “ON/OFF” button once, the ON/OFF indicator illuminates in blue, and the coffee maker starts to brew regular coffee. If you want to brew stronger coffee, first press “STRENGTH” button once, the “STRENGTH” indicator illuminates in blue, then press “ON/OFF” button once, the ON/OFF indicator will illuminate in blue and the coffee maker will start to brew stronger coffee. Note: To cancel the “STRENGTH” setting, press “STRENGTH” button again.
6. The brewing process can be interrupted by pressing the ON/OFF button again at any time, and the ON/OFF indicator will go off, indicating that your coffee maker is shut off.

**Note:** You can take out the carafe, pour and serve at any time and the appliance will stop dripping coffee automatically. The serving process cannot exceed 30 seconds.

7. Remove out the carafe to serve once finished brewing (at about one minute after the coffee stops dripping out.)

**Note:** The coffee you get will be less than the water you have added, as some water is absorbed by the coffee ground and adheres to the plastic.

8. When finished brewing, keep the coffee maker on, if you do not want to serve immediately. The coffee can be kept warm on the warming plate. The coffee maker will be shut off automatically after about 40 minutes from the end of the brewing process if it has not been manually disconnected after the brewing completion. For an optimum coffee taste, serve immediately after brewing.
9. Always turn the coffee maker off and disconnect the power supply when not in use.

**Note:** Pay attention while serving the coffee, otherwise you may be hurt as the temperature of the freshly brewed coffee is high.

## **CLEANING AND MAINTENANCE**

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse the cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from the wall outlet.

1. Clean all detachable parts after each use in hot soapy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the upper area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Reposition all parts and keep for next use.

## **REMOVING MINERAL DEPOSITS**

To keep your coffee maker operating efficiently, periodically, you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency, we recommend removing mineral deposits as follows:

1. Fill the water tank with water and descaler to the max level as indicated on the water level gauge (the proportion of water and descaler is 4:1, the details should be listed in the instructions of descaler). Please use only "household descalers". You may also use citric acid instead of the descaler (the proportion of water and citric acid is 100:3).
2. Insert the glass carafe onto the warming plate.
3. Make sure the filter (without any coffee powder) and funnel are assembled in place.
4. Turn on the appliance and allow it to "brew" the descaling solution by following the operation above.
5. After "brewing" one-cup of solution, switch off the appliance.
6. Let the solution stay for 15 minutes and repeat steps 4-6.
7. Turn on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with water at least 3 times.

## **HINTS FOR GREAT-TASTING COFFEE**

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffee is being used.

## NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

## DECLARATION OF CONFORMITY

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at

[www.morris.gr](http://www.morris.gr)



### **Exclusive importer in Greece:**

Amiridis - Savvidis S.A.

87A, 17<sup>th</sup> Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

[www.amiridis-savvidis.gr](http://www.amiridis-savvidis.gr)