


SEC. WORK	적용모델	재질	인쇄방법	인쇄도수		외곽치수		PAGE	REMARK
				표지	내지	a	b		
63	S3*F*.AL*PEHK	모조지 80g	OFFSET 인쇄	1도	1도	148	210	92	-

<< 주기 >>

1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 FILM에 준함.
3. 외곽치수는 절단후 치수임.
4. 양산전에 설계 한도를 득할 것.
5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것.

<< NOTES >>

1. Material, printing and exterior size are refer to work tables.
2. Printing, text size and line are based on LG design film.
3. Exterior size on the drawing is cutting line.
4. Before product controlled by criteria sample.
5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB, PBDE) and details should comply with LG standard of LG(63)-A-5501-34

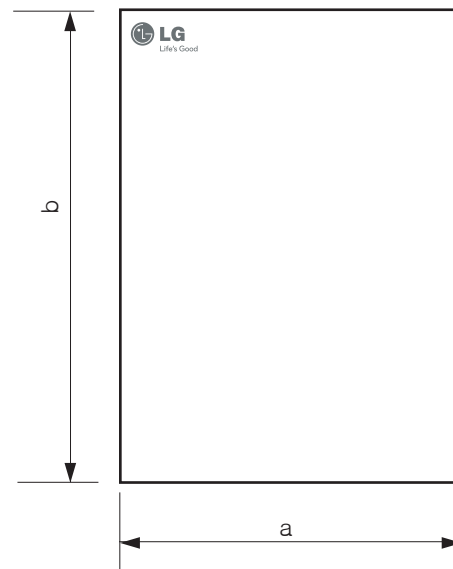

1	물품 형상 변경	EAGL100090	'21.01.06	전영준	이갑선
2					
3					
4					
5					
6					
7					
8					
9					
10					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 시방 번호	DATE 년/월/일	PREPARED 시방자	APPROVED 승인자

TRIG.		UNIT	mm	SCALE	1/1	T I T L E
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED		
류영선 19.09.04		류현관 19.09.04		류현관 19.09.04		
LG 전자 (주) LG Electronics Inc.				RELATED DWG.		DWG. No.

Manual, Owners	
Essence Hongkong	1 / 1
MFL66101263	



OWNER'S MANUAL

STYLER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

S3*F*

EN ENGLISH

HK 粵語



MFL66101263
REV.01_010521

www.lg.com

Copyright © 2019 - 2021 LG Electronics Inc. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS	3
READ ALL INSTRUCTIONS BEFORE USE	3
IMPORTANT SAFETY INSTRUCTIONS	3
INSTALLATION	10
Parts and Specifications	10
Installation Place Requirements	12
Unpacking the appliance	14
Levelling the appliance	15
OPERATION	18
Operation Overview	18
Preparing Loads	20
Checking the Filters before Every Load	21
Checking the Water tanks	22
Loading the appliance	22
Control Panel	29
Programme Table	31
Option Programmes and Extra Functions	35
SMART FUNCTIONS	37
Using LG ThinQ Application	37
MAINTENANCE	39
Regular Cleaning	39
TROUBLESHOOTING	41
Before Calling for Service	41

SAFETY INSTRUCTIONS

EN

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety messages

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the appliance.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire or explosion, electric shock, property damage, injury to persons or death when using this appliance, follow basic safety precautions, including the following:

Children in the household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Installation

- Contact an authorized service centre before installing or relocating the appliance to avoid injury or product damage when moving the appliance.
- When moving the appliance away from the wall, be careful not to roll over or damage the power cord.
- The appliance is heavy. Two or more people are necessary to move and install the appliance to prevent damage or injury.
- Prior to use, ensure that you are connecting the appliance to a dedicated grounded electrical outlet rated for use with the appliance. It is the user's responsibility to replace a standard 2-prong wall outlet with a standard 3-prong wall outlet.
- Before use, the appliance must be properly installed as described in this manual. Electric shock can result if the appliance is not properly grounded.
- Do not install the appliance where there may be a danger of the appliance falling. The appliance is not designed for use on ships or airplanes. Check with an authorized LG service centre for use under other special circumstances.
- Do not tamper with controls.
- Install the appliance where the floor is firm and level. The appliance may vibrate excessively and eventually fall if installed on an unstable surface, causing damage or injury.
- Keep the front side protected when transporting the appliance. Do not truck from the front. The tempered glass panel on the front of the appliance may break, causing damage or injury.
- Properly ground the appliance to conform with all governing codes and ordinances. Follow the details in the installation instructions. Electric shock can result if the appliance is not properly grounded.
- Install and store the appliance where it will not be exposed to temperatures below freezing or exposed to the weather. Allow the appliance to warm to room temperature before use if it was delivered in winter or at sub-zero temperature.

- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To reduce the risk of electric shock, do not install the appliance in humid spaces such as a bathroom. Failure to follow this warning can cause death, serious injury, fire, electric shock, or product deformation or malfunction.
- Remove all packing items and dispose of all shipping materials properly. Failure to do so can result in burns, fire, explosion, or death.
- Connect to a properly rated, protected, and sized power circuit to avoid electrical overload. Improper power circuits can melt, creating electric shock and/or fire hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
- Keep all packaging from children. Packaging material can be dangerous for children. There is a risk of suffocation.
- Do not install near another heat source such as a stove, oven or heater. Failure to follow this warning can cause product deformation, smoke, or fire.
- Do not place candles, smoking materials, or other flammables on top of the appliance. Dripping wax, smoke, or fire can result.
- Remove all protective vinyl film from the appliance. Failure to do so can cause product damage, smoke, or fire.
- The appliance shall be installed in accordance with national wiring regulations.

Operation

- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not climb, stand, or hang on the appliance door or on the shelf or anywhere inside the appliance. The appliance could fall over or be damaged, or other damage or injury could occur.

- Do not step on the doors to the water tanks. The appliance could fall and cause damage and injury.
- Do not place heavy or dangerous objects on top of the appliance.
- Do not put live animals inside the appliance.
- Do not allow children to climb into the appliance when it is in use.
- In the event of a gas leak (propane/LPG), ensure adequate ventilation and contact an authorized service centre before resuming use. Do not touch or disassemble the electrical outlet of the appliance.
- Do not use or place flammable substances (chemicals, medicine, cosmetics, etc) near the appliance or store them inside the appliance. Do not place the appliance in the vicinity of flammable gas.
- Disconnect the power cord immediately if you hear a noise, smell a strange odour or detect smoke coming from the appliance.
- In the event of a flood: Do not go near the appliance when its base is submerged under water. Contact the service centre. There is a risk of electric shock or fire.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not place hands or body near steam nozzle during operation. The steam is hot and could cause an injury.
- Do not insert objects into the steam nozzle. Excessive noise and fire could result.
- Do not drink the water from the water supply or drain tanks.
- Do not disassemble or modify the appliance.
- Do not put hands, feet, or metal objects below the appliance.
- Do not operate the appliance or touch the power cord with wet hands.
- Keep fingers out of pinch point areas; clearances between the door and cabinet are necessarily small. Be careful closing door when children are nearby.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not place items exposed to cooking oils in the appliance. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Do not open door during operation. The performance of the appliance may be adversely affected. If the appliance is installed on or near carpet, condensation from escaping hot air or steam may stain or damage the carpet.
- Do not use the appliance for other than the intended purposes. Damage incurred by using the appliance for purposes other than those specified in this user manual is not covered by the warranty.

Maintenance

- Wipe foreign objects (such as dust and water) off the prongs of the power plug and contact areas regularly. Do not use a wet or damp cloth when cleaning the plug.
- Do not use an appliance to dry the interior. Do not light a candle to remove interior odours.
- Do not spray water onto the appliance directly when cleaning. A fire or electric shock may occur.
- Wipe the interior with a dry cloth after use.
- Clean the lint filter before or after each load.
- Do not use a bleaching agent such as oxygen or chlorine-based bleaches on the exterior of the appliance.

- Do not use sharp objects when cleaning or operating the controls. An electric shock may occur.
- Avoid hitting the front glass panel with heavy objects. Although it is made of tempered glass, the panel may break in the event of a strong impact and cause injury.
- Keep product free from rodents, insects, and other foreign objects. They may damage wires, causing fire or electric shock.

Disposal

- Before the appliance is removed from service or discarded, remove the door to the drying compartment. Cut off the power plug and destroy the button section to prevent reuse.

Technical Safety for using the appliance

- Do not, under any circumstances, cut or remove the ground prong from the power cord. To prevent personal injury or damage to the appliance, the electrical power cord must be plugged into a properly grounded outlet.
- This appliance must be plugged into a 220-240 VAC, 50-Hz grounded outlet protected by a 15-ampere fuse or circuit breaker. Failure to follow these instructions can result in fire, explosion, or death.
- This appliance must be plugged into a properly grounded outlet. Electrical shock can result if the appliance is not properly grounded. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. Failure to follow these instructions can create an electric shock hazard and/or a fire hazard.
- Install the appliance where the plug is easily accessible. Unplug the appliance when not in use to avoid risk of fire or electric shock.
- Unplug the appliance before disassembly or repair to avoid risk of electric shock.
- The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.


- Do not use an extension cord to connect to an outlet. Doing so could result in a fire or electric shock.
- Never unplug your appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet. The power cord can be damaged, resulting in a risk of fire and electric shock.
- Contact LG or a qualified repair person immediately to repair or replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. The power cord can melt, creating electric shock and/or fire hazard.
- When installing or moving the appliance, be careful not to pinch, crush, or damage the power cord. This will prevent injury and damage to the appliance from fire and electric shock.

Grounding instructions

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt that the appliance is properly grounded.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance must be equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- This appliance must be connected to a grounded metal, permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance. Electric shock can result if the appliance is not properly grounded.

Parts and Specifications

Front View

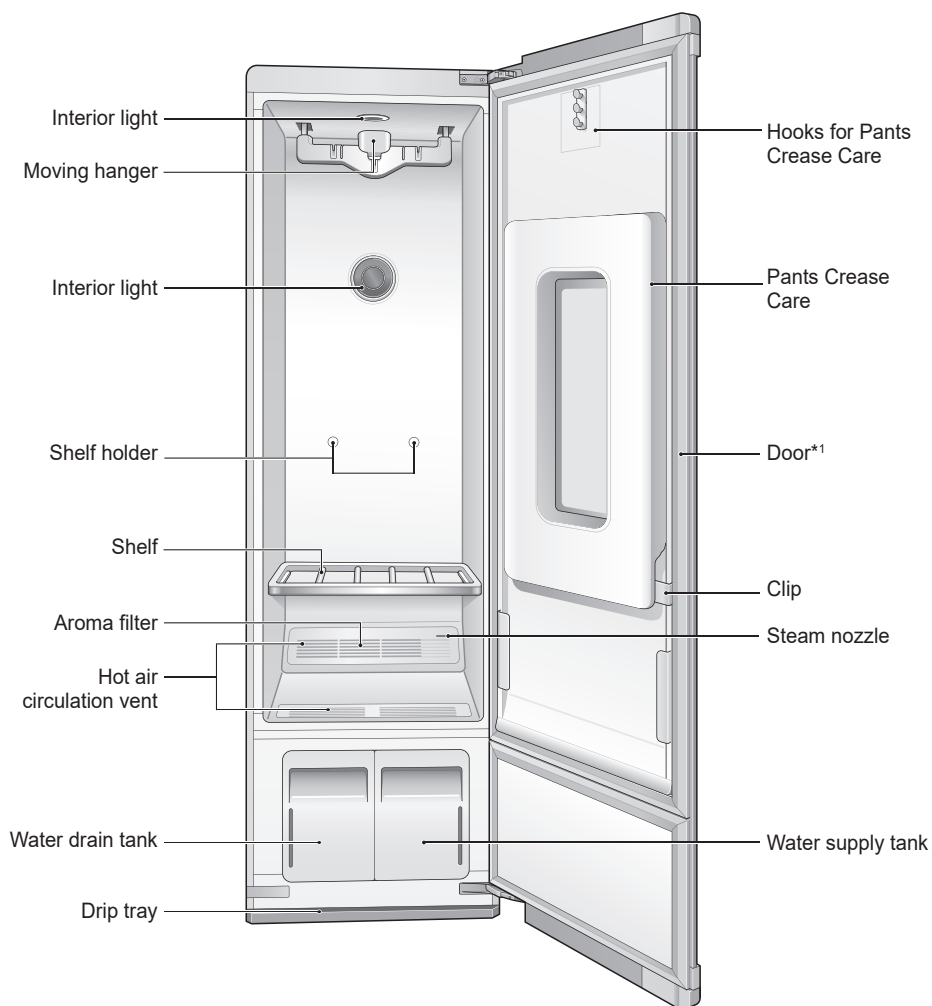


*1: The door swing can be reversed by the installer to fit the installation location.

Specifications

The appearance and specifications listed in this manual may vary due to constant product improvements.

Model	S3*F*
Electrical requirements	Please refer to the rating label regarding detailed information
Dimensions	445 mm (W) X 585 mm (D) X 1850 mm (H), 1010 mm (D with door open)
Product weight	78 kg
Power consumption	1700–1900 W
Maximum capacity	4 items

 Accessories




Shelf



Drip tray




2 pieces of Hangers*1

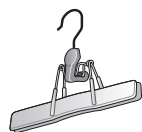

Pants hanger*1



 2 pieces of Anti-Slip Sheets



2 pieces of Rear cap covers



Wrench



2 pieces of Hinge covers

*1: An ordinary metal/plastic hanger can be used if the hook is less than 4 mm thick. The hook must fit in the indentation in the moving hanger snugly. If the fit is too loose, it may result in vibration, noise, and damage to clothing.

NOTE

- Contact the store where the appliance was purchased or LG customer service if any accessories are damaged or missing.
- For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.


Installation Place Requirements

Before installing the appliance, check the following information to make sure that the appliance should be installed in a correct place.

Installation Location

- A grounded electrical outlet should be located within 61 cm of either side of the appliance.
- A sturdy floor should support the total appliance weight of 78 kg. The combined weight of any other laundry appliances should also be considered.
- The floor must be level, with a maximum slope of 2.5 cm under the appliance. If the slope is greater than 2.5 cm, the appliance cannot be levelled properly.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- Do not install the appliance in an area where it will be exposed to water and/or weather. Failure to follow this warning could result in risk of electric shock, injury, or product damage or malfunction.
- Do not install the appliance on a hollow or flexible platform. Doing so may cause excessive noise and vibration and result in damage or injury if the appliance tips over.


Clearances

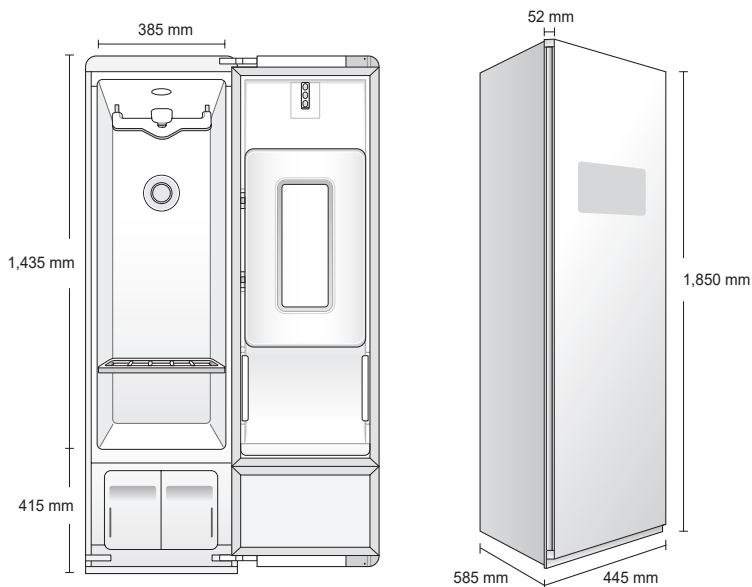

Recommended Installation Spacing

The following clearances are recommended for the appliance. Although the appliance has been tested for clearances of 3 cm on the sides and rear, recommended clearances should be considered for the following reasons:


- Allow at least 46 cm in front to open the door.
- Allow at least 5 cm on both sides and between the back of the appliance and the wall.
- Allow at least 20 cm between the top of the appliance and the ceiling.
- If the appliance is too close to adjacent items, performance may decrease and electricity consumption may increase.
- Additional space should be considered on all sides of the appliance to reduce noise transfer.

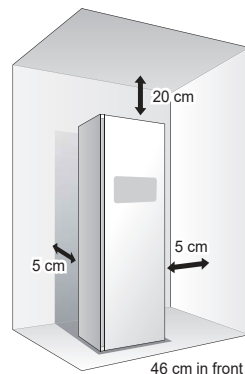

Installation Spacing for Recessed Area or Closet Installation

There should be at least a little space around the appliance (or any other appliance) to avoid contact with walls, furniture, or other appliances during operation. Allow a minimum of 3 cm on all sides of the appliance to avoid increased noise or damage.

- For closet installation, with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilation openings are acceptable.
- Minimum vent opening for built-in installation is 200 cm².

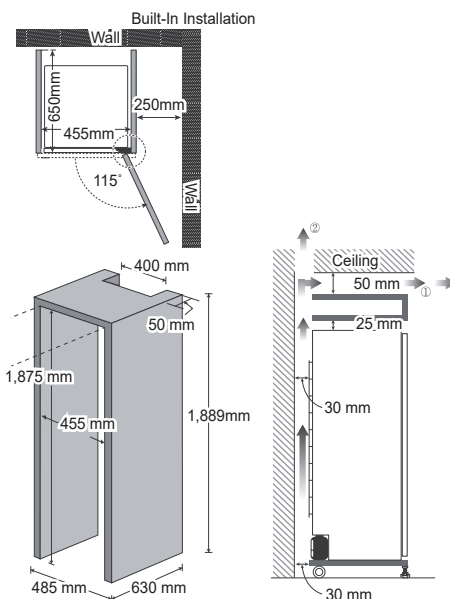


Closet Ventilation Requirements

Closets with doors must have both an upper and lower vent to prevent heat and moisture build-up in the closet.

One example shown uses vent grilles in the door.

- One upper vent opening with a minimum opening of 310 cm² must be installed no lower than 185 cm above the floor.
- One lower vent opening with a minimum opening of 155 cm² must be installed no more than 30.48 cm above the floor.

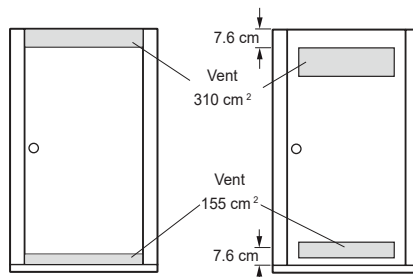

Closet door vent requirements

Electrical Connection

- Install where an outlet is easily accessible.
- Use an individual, grounded outlet: 220–240 Volts, 50 Hz, AC, 8 Amps minimum.

! WARNING

- Do not plug in multiple appliances in the same outlet with the appliance. Overloading house wiring can cause a fire hazard.
- To reduce the risk of electric shock, do not install the appliance in a wet or damp area.

! WARNING

- The appliance should be unpacked and moved by two or more people. Failure to do so can result in serious injury by tipping the appliance.

! CAUTION

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of the appliance.

NOTE

- Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Ambient Temperature

- Temperature must be between 10°C and 35°C.
- If the ambient temperature is too low or high, performance may be affected.
- Do not install in direct sunlight or where the temperature may fall below 0°C.

Unpacking the appliance


Removing carton and shipping materials

Unpack the appliance from carton then remove any tapes and temporary labels from the appliance.

- Do not remove any warning labels, the model and serial number label, or the technical sheet label that is located under the front of the appliance.

Moving the appliance

Use the wheels ❶ at the bottom of the appliance to move the appliance. Push the appliance slowly from about halfway down the front side.

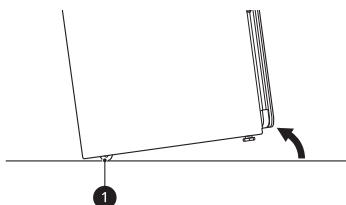

⚠ CAUTION

- Keep the appliance upright when moving it. If you lay the appliance on its side, refrigerant may leak and cause the appliance to malfunction.

Levelling the appliance

Checking the Level

Levelling the appliance prevents unnecessary noise, vibration and movement. Check whether the appliance is perfectly level after installation.

Adjusting and Levelling the appliance


⚠ WARNING

- The appliance is heavy. Two or more people are required when levelling the appliance. Failure to follow this warning can cause serious injury or death.

- 1 Position the appliance in the final location and check to make sure it is level.
 - All levelling feet must rest solidly on the floor. Gently push on the corners of the appliance to make sure that it does not rock from corner to corner. Make sure there are no gaps between the front levelling feet and the floor.

- 2 Use the wrench (packaged with the appliance) to turn the levelling feet.


- Unscrew the front feet to raise the appliance or screw in the feet to lower it. If unable to level the appliance using only the front feet, install the two rear levelling feet by tipping the appliance. Do not lay the appliance down to install the levelling feet.
- Raise or lower the appliance using the levelling feet until the appliance is level from side to side and front to back.

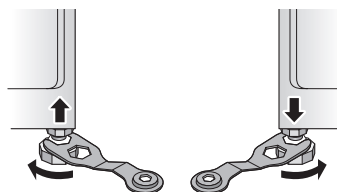

⚠ CAUTION

- Make sure that all levelling feet are in firm contact with the floor. If the appliance is used without levelling, it may fall, causing injury, damage, or product malfunction.
- Adjust the levelling feet only as far as necessary to level the appliance. Extending the levelling feet more than necessary can cause the appliance to vibrate.

- 3 When the appliance is completely stable and all levelling feet are resting solidly on the floor, tighten the locking nuts ❶.

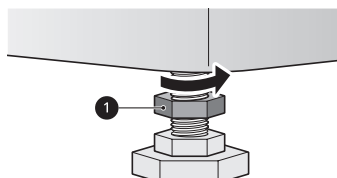

Reversing the door

It is possible to reverse the direction of the door swing. This should be done by the installer at the time of installation, if desired.


NOTE

- If the direction of the door swing needs to be changed after installation, contact the LG Customer Information Centre.

Using Anti-Slip Sheets

Anti-slip sheets prevent the appliance from shaking or shifting when opening or closing the door.

- 1 Clean the floor to attach the anti-slip sheets.
 - Use a dry rag to remove and clean foreign objects or moisture. If moisture remains, the anti-slip sheets may slip.
- 2 Adjust the level after placing the appliance in the installation area.
- 3 Place the adhesive side ❶ of the anti-slip sheets on the floor.

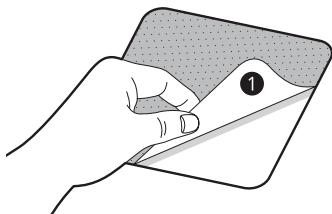

- 4 Put the appliance on the anti-slip sheets.
 - Do not attach the adhesive ❶ of anti-slip sheets to the feet of the appliance.

- 5 Recheck the appliance's levelness.

- Push or rock the edges of the appliance gently to make sure that the appliance does not rock. If the appliance rocks, level the appliance again.


NOTE

- The pads may leave a sticky residue when they are removed. The residue can be removed with alcohol.

Assembling the drip tray

Before using the appliance, insert the drip tray onto the bottom of the cabinet.

- 1 Hold the tray so the arrow and letter on the front of the tray face up.
- 2 Insert one side of the tray first, then the other. Push the tray until it slides completely in.

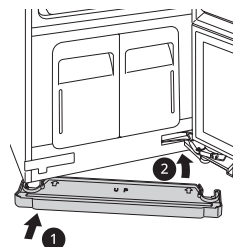

- 3 To detach, pull one side out then the other.
 - If the tray collects water, detach it and empty the water. After emptying it, re-assemble the tray.




CAUTION

- Do not operate the appliance without installing the drip tray. Doing so could lead to water damage caused by leaking.


Installing cap covers

- 1 Line up the nubs on the cap cover with the holes in the top corner of the cabinet and then snap the cap cover into place.
- 2 Repeat with the remaining cap cover on the other corner.

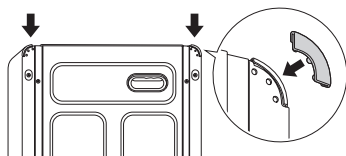

Installing hinge covers

- 1 Open the appliance door.
- 2 Snap the hinge cover onto the upper hinge assembly with the bent edge on the far side from the hinge.

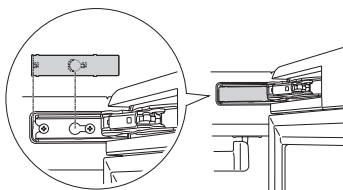

- 3 Repeat with the remaining hinge cover on the lower hinge assembly.

Operation Overview

Using the Appliance



1 Prepare items.

- Wash clothes first, if needed.
- No heat-sensitive items or items that can be damaged by exposure to water.
- Place items on hangers or the shelf.
- Fasten buttons and close zippers to keep items on moving hangers and prevent damage.



2 Clean lint filter, change sheet in aroma filter.

- Lift out filter and remove lint from last load for faster and more efficient performance. Reinstall filter, checking alignment when closing grill. Do not operate the appliance without the lint filter in place. If using a fabric softener sheet in the aroma filter, change it after every use.



3 Check water tanks.

- Fill water supply tank if needed. Empty water drain tank if needed. Use clean tap water in the supply tank for better product performance and lifespan.



 
4 Load the appliance.

- Pay attention to fabric care labels and programme choice. If clothing is not appropriate for the programme selected, it may shrink or be seriously damaged.
- Remove all empty hangers to avoid noise, friction, and damage to clothing.



5 Turn on the appliance.

- Touch **Power** button to turn on the appliance.



6 Choose a programme.

- Touch a programme selector button to select desired programme and settings.



7 Begin a programme.

- Touch and hold **Start/Pause** button to begin a programme. Pause programme at any time by touching **Start/Pause** button again. Restart programme within 14 minutes of pausing it, or the appliance shuts off and settings are lost. Do not open door during programme. If steam or hot air escapes from open door, condensation may collect on floor or walls, resulting in damage or mold.



CAUTION

- Do not open the door during operation. There is a risk of burns or injury from escaping hot air or steam.
- Do not allow steam or hot air to escape the cabinet during operation. Opening the door during operation also affects performance, lengthens styling time, and results in water condensing and collecting on the floor.

8 End of programme.

Remove items when programme finishes. Leave door open to let hot air escape. Interior light shuts off after 1.5 minutes if door is left open.

Preparing Loads

Checking the Fabric Care Labels

Most articles of clothing feature fabric care labels that include instructions for proper care. Below are some of the symbols that are relevant to choosing appropriate items for the appliance.

Symbols on the care labels

Label	Meaning	Check
	Hand wash	✓
	Machine wash, normal cycle	✓
	Perm press/wrinkle resistant	✓
	Gentle/delicate	✓
	Do not wash	✓ ^{*1}
	Normal	✓
	Permanent press/wrinkle resistant	✓
	Gentle/delicate	✓
	Do not tumble dry	✓
	Do not dry	NO
	Line/hang dry	✓
	Drip dry	✓
	Dry flat	✓
	High	✓
	Medium	✓
	Low	✓
	No heat/air dry	NO

*1: Some items such as fur and leather, which are labelled as do not wash, can be used with the appliance.

Sorting the items

- For best fabric care results, always treat fabrics with similar care requirements together.
- Different fabrics have different care requirements, and some fabrics cannot be treated in certain programmes or should be treated separately.

Checking the items before Loading

Some items are not appropriate for use with the appliance. Using the wrong programme for items can result in damage to fabrics.


- Check all pockets to make sure that they are empty. Items such as clips, pens, coins, and keys can damage both the appliance and your clothes.
- Do not put items that are sensitive to heat or are not suitable for washing with water in Styler programmes that use steam. Use the **Gentle Dry** programme only.
- Fur, leather (only 100% natural leather) should only be treated with the **Fur/Leather Care** programme. This programme is a downloadable programme.
- Wash heavily soiled or stained clothes before putting them in the appliance. The appliance does not have a washing function. Loose soil or stains can be transferred between garments during programmes.
- Treat items with an unpleasant odour in a separate load. Odours can be transferred between items during programmes.
- Clothing should be securely fastened, with zippers and buttons closed, so that it does not fall off the moving hanger during the programme.
- Do not put very wet items in the appliance to dry. Shake off or wring out excess water before putting items in the cabinet to dry. If a large amount of water pools in the cabinet, styling performance may suffer or the appliance may be damaged.

Checking the Filters before Every Load

Checking the Lint Filter


Always make sure the lint filter is clean before starting a new load; a clogged lint filter will increase styling times.

- 1 Open the front grill ❶ and take out the lint filter ❷.

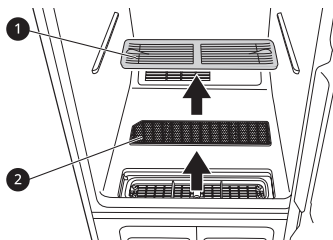

- 2 Brush the lint filter with a soft brush or clean it with a vacuum cleaner.


- If the lint filter is torn or damaged, replace it with a new one.

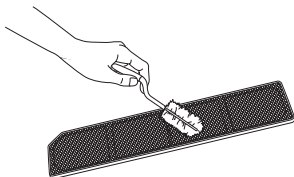

- 3 Reinstall the filter.

CAUTION


- Check that the sides are aligned correctly when inserting the front grill.

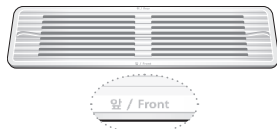


Changing the Aroma Sheet

Use a dryer fabric softener sheet to add a refreshing aroma to items. Replace the fabric softener sheet after every use.

- 1 Remove the aroma filter from the appliance.

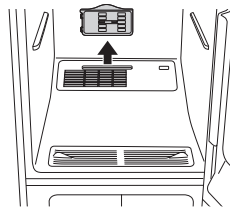


- 2 Open the aroma filter and insert a dryer fabric softener sheet ❶ into it.

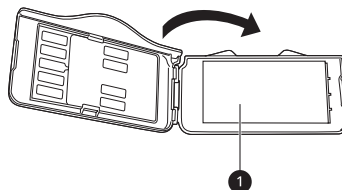

- 3 Close the aroma filter and insert it back in the appliance.

- Insert the aroma filter in the direction of the arrow. You can adjust the opening of the aroma filter using the adjustment lever. The more open the aroma filter is, the richer the aroma gets.

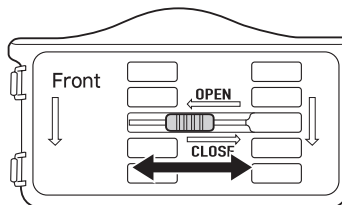

- 4** When the programme is complete, remove the aroma filter and discard the fabric softener sheet.


NOTE

- Spray perfume 4–5 times on a cotton pad and then place it in the Aroma Holder to use. (However, the fragrance strength can vary depending on the scent.)

Checking the Water tanks

Check the water in the water tanks before use. The water supply tank must be filled with water before using the appliance. The appliance does not work without water. The water drain tank should be emptied before each use.

- 1** Pull the handle of the tank forward and then take the tanks out of the appliance. Check water level of the tanks.

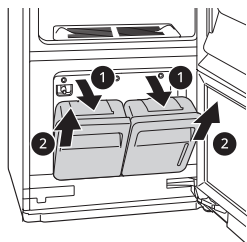

- 2** Make sure the water supply tank is filled with water.
- The full water supply tank can be used approximately four times, depending on the programmes used.
 - Use clean tap water or bottled water for best performance and longer product life. Do not use distilled water or reuse the water from the drain tank.
 - The first time the appliance is used, 2/3 of the water in the fully filled water supply tank is used. Less water is used in following programmes.

CAUTION

- Only use water when filling the water supply tank. Any other substance, such as detergent or fabric softener, may damage the appliance.
- Use only clean tap water or bottled water. Foreign materials in the water may shorten the lifespan of the appliance.
- Do not use distilled water. The water sensor may not work.
- Do not reuse the water in the drain tank to fill the water supply tank.

- 3** Make sure the water drain tank is empty.

- 4** The drain tank will be filled after about three uses. The tank fills more quickly during styling programmes. The appliance does not work if the drain tank is full.
- Some discolouration of the water drain tank may occur over time. This is normal and will not affect product performance.

Loading the appliance

WARNING

- Flammable objects such as lighters or matches could ignite, causing a fire. Failure to do so can result in fire, explosion, or death.
- Never style clothes that have been exposed to oil, gasoline, or other flammable substances. Failure to obey this warning can result in fire, explosion, or death.

Choosing Styling method suitable for your items

Item	How to style it
Suit coat, blazer	Moving hanger
Coat, jacket (short)	
Coat (long)	
Dress (short)	Moving hanger (remove shelf)
Dress (long)	

Item	How to style it
Skirt	Moving hanger
Lightweight blanket, throw	
Baby blanket	
Pants (not creased)	
Shorts	
Children's clothes	
Scarf	Moving hanger or shelf
Tie	
Shawl	
Lingerie	Moving hanger or shelf (if delicate)
Shirt, blouse	
Pants (creased)	Pants Crease Care
Cap, hat	Shelf
Stuffed toys	
Pillow	
Sweater	
Knitwear	
Infant clothes	


- Use the moving hanger for suits, coats, jackets, blouses, dresses, skirts, and pants that don't require a crease. Use the pants crease care to crease pants.
- Anything that can be securely placed on a hanger and steamed or dried without retaining hanger marks or other damage can be placed on the moving hanger.
- Style sweaters or knits on the shelf to avoid hanger marks.
- Arrange clothing so it does not touch the sides or rear of the cabinet, if possible. Condensation may form on the interior surface of the cabinet, and items in contact with the surface may remain damp at the end of the programme. Hang larger items on the diagonal indentations on the moving hanger.
- The moving hanger will move even when only the shelf is being used.

⚠ CAUTION

- Remove empty hangers from the moving hanger and place them on the shelf before starting the programme. Empty hangers may cause unnecessary noise, friction, and damage to fabrics.
- Do not lean or pull on the moving hanger.
- Hang hangers in the same direction on the moving hanger to prevent collisions.
- Do not allow children to play with or hang onto the moving hanger. The appliance could tip, resulting in damage or injury.

The Moving Hanger

Hang clothes on the moving hanger using the hangers provided with the appliance, or use any plastic or metal hanger that hooks snugly into the indentations in the moving hanger.

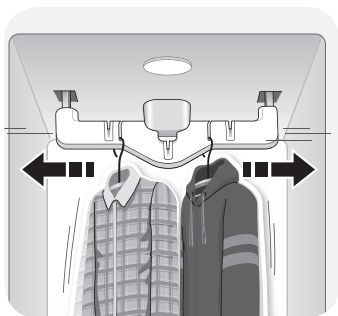


Using the Moving Hanger

- 1 Insert hangers into slots and pull down to secure the hook snugly.
 - Hooks should fit down in the slots snugly to prevent noise, vibration, or damage to items during operation.

- 2** Use the diagonal slots **2** and **4** for bulky items.

- Do not use diagonal slots and standard slots during the same programme. The hangers may knock into each other and damage clothing.

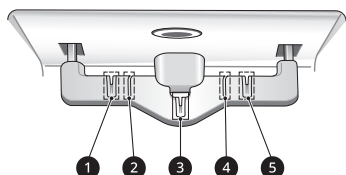

- 3** Do not overcrowd items.

- The fewer items, the better the styling performance. Items that touch the sides of the cabinet may pick up condensation from the cabinet and fail to style completely.

How to use Hangers

The hangers that come with the appliance are for use with the appliance only. Any plastic or metal hanger that has a hook less than 4 mm thick and hooks snugly into the indentations in the moving hanger can be used in the appliance.

- Do not use hangers with wool, knitwear, or delicate lingerie. The garments may stretch or be left with hanger marks.
- Wrinkles may appear at the back of the collar on some garments.
- Use the diagonal hanger grooves in the moving hanger for large or bulky items.
- Remove empty hangers or store them in the shelf during operation.
- Fasten buttons and zippers on hanging clothes to prevent them from falling off hangers during operation. Fasten the neck area with cotton string if there is no button or zipper.
- Remove or store the shelf when hanging longer items so items won't get wrinkled.

- 1** Select an appropriate hanger.

- Choose the appliance hanger that fits the item you are hanging up.

- 2** Fasten the buttons and zippers on all garments and hang them on hangers.

- Doing so helps keep the garments from falling or becoming more wrinkled during the programme. If a garment has no buttons or zipper, fasten it with a cotton string around the collar area.



- 3** Place the hangers into the slots of the moving hanger.




The Pants Hanger

Place pants either on the moving hanger or in the pants crease care, depending on whether maintaining the creases on the pants legs is desired.


- Hanging pants on the moving hanger may reduce the creases on pants legs.
- To maintain the creases on pants legs, use the pants crease care.
- Pants should be no wider than 96 cm or longer than 110 cm to fit in the pants crease care. Check the size of the pants before using the pants crease care. If pants are too large, use the moving hanger.
- The fabric content of the garments affects how well wrinkles are reduced.
- Use the default downloaded extra pants care programme for the most effective wrinkle removal for pants.

Opening and Closing the Pants Hanger


- 1 To open, fold the hook down toward the hanger blades to unlock and separate the blades.

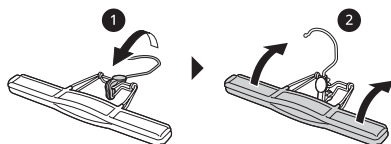

- 2 Once pants are inserted, bring the blades together and rotate the hook up and away from the blades to lock them in place.

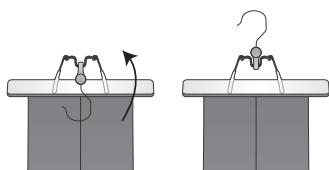

- 3 Tug gently on the sides of the pants legs. Make sure pants are stretched tight within the hanger, with no wrinkles, and will not fall out of the hanger during the programme.

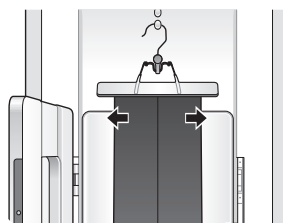


- 4 Place the pants hanger on the moving hanger or in the pants crease care.



Hanging Pants On the Pants Hanger

- 1 Remove all objects from pants pockets and button the back pockets.
- 2 Fold pants along crease lines (or where crease lines would be), and attach the pants hanger at the ends of the pants legs.

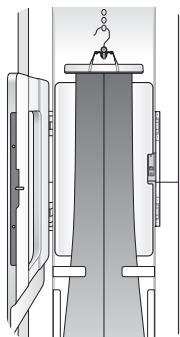


The Pants Crease Care

Hang clothes in the pants crease care using the pants hanger provided with the appliance or any pants hanger that fits into the hooks above the door to the pants crease care.

! CAUTION


- Do not lean on or hang heavy items on the door of the pants crease care. The appliance may tip, resulting in damage or injury.
- Do not allow children to play with or hang onto the door of the pants crease care. The appliance may tip, resulting in damage or injury.
- Keep fingers out of pinch point areas when closing the door of the pants crease care. Supervise nearby children to prevent injuries.

- 1** Open the pants crease care by pressing on the icon on the side.

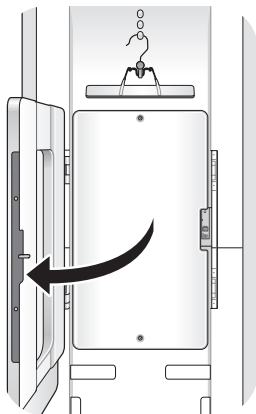

- 2** Hang the pants hanger on the hook above the pants crease care that best fits the length of the pants being pressed.


- If the pants are longer, use the higher hooks to keep the pants from hitting the floor of the cabinet.

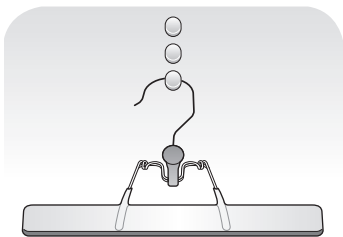

- Pants should be no wider than 96 cm or longer than 110 cm. Check the size of the pants before using the pants crease care. If pants are too large, use the moving hanger.


- 3** Make sure the pants are hanging straight.

- Check the creases on the legs to make sure they are lined up. Fix the pants with 2 clips before closing the pants crease care. If the pants legs are not aligned properly or the pants are not hanging straight, double lines may appear at the pants' edges, or the pants may be wrinkled.

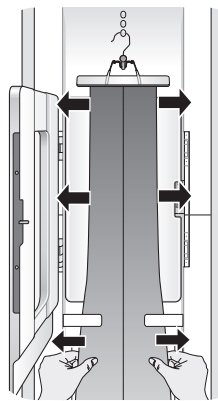

- 4** Close the pants crease care, then straighten the pants once more.

- Gently tug the edges of the pants to smooth out any wrinkles. Make sure the pants are hanging straight in the pants crease care.

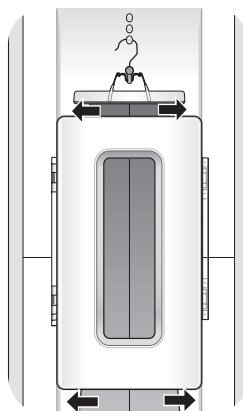

NOTE

- Pants can be pressed while refreshing other items in the same programme.
- To avoid double creases, run the strong course with the moving hanger to remove any existing knife pleats, and then use the pants press.
- For optimum results, use the extra pants care programme which is designed for use with the pants crease care feature. This programme can be downloaded using the LG ThinQ and used as the Downloaded programme.

The Shelf

Use the shelf when styling clothes or other items that are difficult to hang or that may be damaged by hang styling.

CAUTION


- Do not allow children to climb on or hang on the shelf. The shelf may fall or the appliance may tip, resulting in damage or injury.
- Do not place heavy objects on the shelf or use it to store objects. The shelf may fall, resulting in damage or injury.

NOTE


- Use the shelf for sweaters, knits, lingerie, or delicate blouses that can show hanger marks, stretching, or other damage if dried on a hanger.
- For best styling performance, do not stack items on the shelf. Style single items or place items side by side with space between.
- When not in use, store the shelf on the shelf holder knobs in the back of the cabinet.
- Arrange items on the shelf so they do not touch the sides or rear of the cabinet, if possible. Condensation may form on the interior surface of the cabinet, and items in contact with the surface may remain damp at the end of the programme.

Assembling the Shelf

- 1 Hold the shelf so that the grey trim is toward the front.

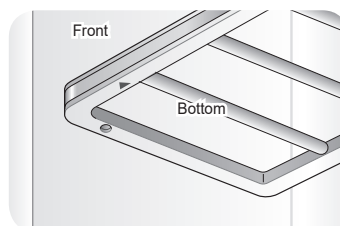



- 2 Insert the left shelf groove into the left shelf support, then lower the right shelf groove onto the right shelf support.

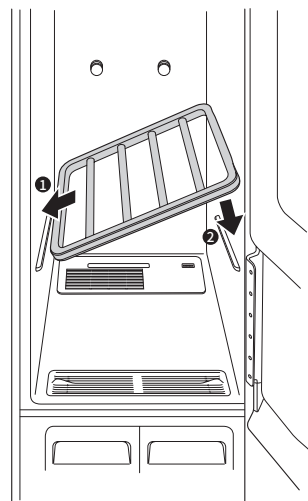**NOTE**

- The shelf cannot be assembled by sliding it into the cabinet. It will fall if not assembled properly.
- 3 To disassemble, lift up the right side of the shelf, then pull out the left side of the shelf from the shelf support.

NOTE

- Hang the shelf on the shelf holder when treating long clothes such as coats or dresses.

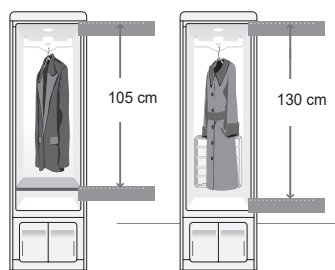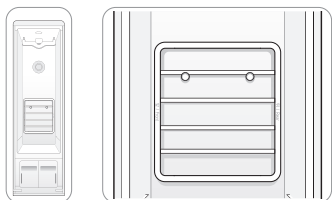


- 2 When styling long clothes, if the shelf is stored on the shelf holder, store the hangers outside the appliance during operation.

- 3 Do not use the shelf to store heavy items.

**Storing Hangers**

Remove unused hangers from the moving hanger and store them in the shelf during operation. This prevents noise and damage to clothing.

- 1 Insert the hangers between the rails of the shelf.

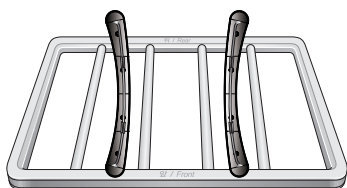


Control Panel

The control panel responds to touch using static electricity. A light touch is enough to operate it. Use a cloth when cleaning the controls to avoid contacting and activating the buttons. Foreign substances on the control, wearing gloves, or touching the buttons through cloth may prevent the buttons from activating.

Control Panel Features

Depending on the model, some of the following functions may not be available.

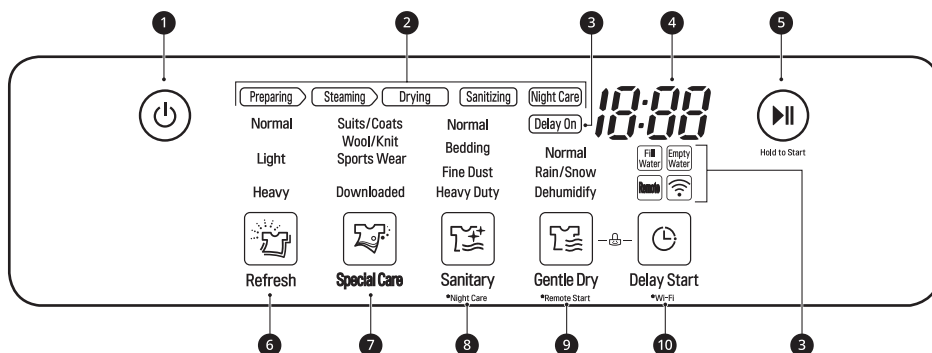

1 Power Button

Touch **Power** button to turn the appliance On/Off. Once the programme is complete, the appliance automatically turns off after a few seconds if no buttons are touched.

NOTE

- Touching **Power** button during a programme will cancel that programme and the programme settings will be lost.

2 Programme Process Indicator

This portion of the display shows which stage of the styling programme is currently underway.

3 Option and Alert Indicators

- **Delay On**: lights when the **Delay Start** feature is set.
- **Fill Water**: lights when the water supply tank is missing or empty.
- **Empty Water**: lights when the water drain tank is missing or full.
- **Remote**: lights when the **Remote Start** function is engaged.
- **Wi-Fi**: lights when the Wi-Fi function is set.

4 LCD Display

The display shows the estimated time remaining and error messages for the appliance. The programme time may vary by usage conditions.

5 Start/Pause Button

Touch and hold to start the selected programme. If the appliance is running, touch to pause the programme without losing the current settings.

NOTE

- If you do not touch **Start/Pause** button to resume a programme within an hour of pausing it, the appliance turns off automatically.

6 Refresh Programme

- Touch the button to select a **Refresh** programme.
- Touch repeatedly to toggle through the settings.

7 Special Care Programme

- Touch the button to select a **Special Care** programme.
- Touch repeatedly to toggle through the settings.
- Downloaded setting has 5 default programmes. Download a new programme using the LG ThinQ application on a smartphone.

8 Sanitary Programme / Night Care

- Touch the button to select a **Sanitary** programme. Touch repeatedly to toggle through the settings.
- Touch and hold the button for 3 seconds to activate/deactivate the **Night Care** function.

9 Gentle Dry Programme Selector / Remote Start

- Touch the button to select a **Gentle Dry** programme. Touch repeatedly to toggle through the settings.
- Touch and hold 3 seconds to activate the remote control function.

10 Delay Start / Wi-Fi

- Set a delayed start time for the programme. The option cannot be selected with the **Night Care** programme.
- Touch and hold the button for 3 seconds to activate/deactivate the Wi-Fi function.

Programme Table

The programmes are designed to fit a variety of situations. Select the programme and setting that best match the load contents and desired results for maximum performance and fabric care.

Styling Programme Guide

Programme	Refresh
Setting	Normal / Light / Heavy Use this programme to reduce odours and wrinkles and to dry items. This programme uses steam and should only be used with washable items. The programme is safe for washable wool and knitwear.
Fabric / Clothes	Suit, coat, school uniform, scarf, wool, knitwear, outdoor/performance clothing, towels, underwear, t-shirts, socks, jeans, jean jackets, lingerie, sportswear, tablecloths

Programme	Special Care
Setting	Suits/Coats: Specially designed to quickly remove odours from suits and coats.
	Wool/Knit: Specially designed to relieve wrinkles from wool and knit.
	Sports Wear: Use to protect fabric for sports wear.
	Downloaded: Downloaded setting has 5 default programmes. Download a new programme using the LG ThinQ application on a smartphone.
Description	Use this programme to reduce odours and wrinkles for the specific type of clothes such as suits and knit. You can also download additional programmes and use it to treat special fabrics like fur and leather.

Programme	Sanitary
Setting	Normal / Bedding / Fine Dust / Heavy Duty Use this programme to reduce germs and to dry items. Choose this programme for clothing, bedding, and children's clothing and soft toys. Quilts or blankets should be a single layer and weigh 1.5 kg or less.
Fabric / Clothes	Suit, coat, school uniform, scarf, outdoor/performance clothing, towels, underwear, t-shirts, socks, jeans, jean jackets, lingerie, sportswear, tablecloths
Note	- Do not use this programme for wool or knitwear, because the high temperatures and steam can cause shrinkage. - Natural fibers must be marked washable/hand-washable and tumble dry, to avoid shrinkage. - Do not use with items containing rubber, foam, or adhesive.

Programme	Gentle Dry
Setting	Normal: Use this setting to reduce odours and wrinkles for non-washable fabrics like cashmere, and to dry items.
	Rain/Snow: Use this setting to dry damp clothes.

NOTE

- Check **Fabric Care Guide** in this manual and fabric care labels on garment before styling.
- Wrinkles may remain in some items. Wrinkles caused by extended storage may be difficult to reduce. Wrinkles in cotton or linen may not be reduced completely. Iron after styling, if desired.
- Some odours can be difficult to remove. Odours from oily substances may be difficult for the steam to penetrate. Odours from extended storage may also be difficult to remove.
- Programme times may vary depending on the usage environment, including water temperature.
- Very thick clothing may not be dried uniformly at the end of the programme.
- Styling times for the programme may be longer for wet clothes that are not spin dried.
- Make sure fabrics are washable/hand washable if using **Refresh** or **Gentle Dry** programme.

Process Details for Each Styling Programme

- **Preparing:** This process heats the water in the water tank in preparing for supplying steam.
- **Steaming:** This process sprays steam on the clothes.
- **Drying:** This process removes moisture in the clothes.
- **Sanitizing:** This process removes germs from the clothes.

Programme		Styling Process			
Programme	Setting	Preparing	Steaming	Drying	Sanitizing
Refresh	Normal	●	●	●	
	Light	●	●	●	
	Heavy	●	●	●	
Special Care	Suits/Coats	●	●	●	
	Wool/Knit	●	●	●	
	Sports Wear	●	●	●	
	Downloaded				
Sanitary	Normal	●	●	●	●
	Bedding	●	●	●	●
	Fine Dust	●	●	●	●
	Heavy Duty	●	●	●	●

Programme		Styling Process			
Programme	Setting	Preparing	Steaming	Drying	Sanitizing
Gentle Dry	Normal			●	
	Rain/Snow	●	●	●	
	Dehumidify			●	

NOTE

- If the **Sanitary** programme is changed to a kind of **Refresh** or **Gentle Dry** programme during operation, the sanitize process is not performed.

Fabric Care Guide

Fabric & Clothes	Programme			
	Refresh		Sanitary	Gentle Dry
	Wrinkles	Odours		
Cotton Towels, socks, underwear, jeans, sportswear, T-shirts, blankets		●	●	●
Linen, hemp, ramie Summer clothes, tablecloths		●	●	●
Alpaca, camel hair, cashmere Coats, suits	●*1	●*1	●*1	●*1
Scarves, knitwear		●*1		●
Fur, leather Coats, scarves	• Style the fur, leather clothes using a special programme, which is downloadable from LG ThinQ application. But leather is only 100% natural leather (No artificial leather)			
Silk Neckties, ribbons, scarves, blouses, silk velvet/plush	• Do not style silk clothes.			
Wool Sweaters, knitwear		●*1		●
Winter coats, suits, sportswear, uniforms	●	●	●	●

Fabric & Clothes	Programme			
	Refresh		Sanitary	Gentle Dry
	Wrinkles	Odours		
Acetate Suit lining, blouses, neckties, pajamas	●	●	●	●
Acrylic Thermal underwear, knitwear	●	●	●	●
Nylon Stockings, lingerie	●	●	●	●
Polyurethane (less than 5%) Stretchable clothing	●	●	●	●
Rayon Suit lining	●	●	●	●

*1: Check fabric care labels in garments before use.

NOTE

- Fabrics come in a wide variety of weights and finishes and can have different care requirements for each variety. It is difficult to cover them adequately in this manual. Before using the appliance with any item, check the care label before proceeding.
- Do not put items that are not colourfast, are heat-sensitive, or are not suitable for washing with water in the **Refresh** or **Sanitary** programmes. Do a water blot test on a small, inconspicuous spot (an inside seam) to determine if the fabric is colourfast. For further assistance, consult the clothing manufacturer, a dry cleaning professional, or a more detailed fabric care guide.
- Using the appliance with items that are very wet or are not colourfast may result in damage to the items and staining from fabric dyes on the interior of the cabinet. These stains will not affect the operation of the appliance. Use toothpaste to remove stains from interior of cabinet.
- The appliance does not have a washing function. Wash soiled items before use.

Option Programmes and Extra Functions

Child Lock

Use this function to prevent unwanted use of the appliance or to keep programme settings from being changed while the appliance is operating.

- 1 Touch and hold the **Gentle Dry** and **Delay Start** buttons for 3 seconds to activate or deactivate the control lock function.
- 2  appears on the LCD display, and all controls are disabled except the **Power** button.

NOTE

- The function does not lock the door.
- The function is retained even if there is a power outage.
- Once set, the function remains active until it is manually deactivated. The function must be deactivated to run another programme.

Delay Start

Use this function to delay the start time of the programme.

- 1 Touch **Power** button.
- 2 Choose a programme and setting.
- 3 Touch **Delay Start** button to set the start time of the programme.
 - The default delay time is 3 hours. Each time you touch the button, the time increases by an hour, up to 19 hours.
 - Touch and hold the button to increase the delay time more quickly.

Night Care

Use this function to store items overnight or anytime items can't be removed soon after a programme ends. The function periodically produces warm air to prevent condensation, keeping items warm and dry until they are removed.

- 1 Place clothes into the appliance.
- 2 Choose a programme and setting.
- 3 Touch and hold **Sanitary** for 3 seconds to activate the **Night Care** function.
- 4 Touch **Start/Pause**.
- 5 To cancel the function, touch another programme button.

NOTE

- Once set, the function starts after the selected programme ends.
- The function can't be set to follow a **Gentle Dry** programme.
- The settings are lost if you touch **Power** button.
- The function runs for a maximum of 24 hours.
- It is safe to open the door at any time during the function, even when the air is blowing.
- It is normal for the Night Care function to make noise periodically as it produces warm air.

Dehumidify

Dehumidifies the room where the appliance is installed. Room dehumidifying time can be set to 2 or 4 hours by touching the **Gentle Dry** button.

Notification icon will be displayed with alarm if drain tank is full. Empty drain tank and touch **Start/Pause** button to continue dehumidification.

- The Night Care feature cannot be used while using **Dehumidify** setting.
- Use while door is open 45°. If door is closed, the course does not operate.
- The drain tank may be filled before end of **Dehumidify** setting depending on the environment.
- It is possible for room temperature to increase due to outgoing airflow from the appliance.

Downloaded Programme

Download additional programme and use it to treat special fabrics like fur and leather, reduce noise or remove static.

Choose a desired programme

- 1 Touch **Power** button.
- 2 Touch **Special Care** button repeatedly until the **Downloaded** setting is illuminated.
- 3 Touch **Start/Pause** button.

NOTE

- Only one downloaded programme can be saved and changed at a time.
- Download and use the **LG ThinQ** application on a smartphone to confirm the current downloaded programme or to download another programme.


There are 5 default programmes.

- **Trouser Wrinkle Care:** Intensively straightens wrinkles and accentuates the creases in pants.
- **Fur/Leather Care:** Removes moisture and dust from fur/leather clothing without damaging fabrics and restores the volume of fur which gets flattened during storage and in everyday activities.
- **Static Removal:** Removes static electricity in a short amount of time using the steam technology.
- **Jean Care:** Keeps clean the jeans concerned of colour migration or washout.
 - The jeans may be washed out, so use the trouser hanger to pick it up and hang it on the moving hanger.
- **Down Jacket Care :** Keeps the warmth of padded garments compressed due to storage or worn without any major contamination.
 - If you place several bulky padded garments in the appliance, its styling performance may be compromised due to the interference with the appliance's internal airflow. So it is recommended to place one padded garment at one time.


Using LG ThinQ Application

Things to check before using LG ThinQ

- 1 Check the distance between the appliance and the wireless router (Wi-Fi network).
 - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.
- 2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.

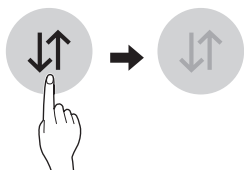

- 3 Connect your smartphone to the wireless router.

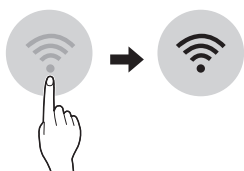

NOTE

- To verify the Wi-Fi connection, check that Wi-Fi  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.

- The Wi-Fi may not connect or the connection may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the appliance again.

Installing LG ThinQ Application

Search for the **LG ThinQ** application from the Google Play Store or Apple App Store on a smartphone. Follow instructions to download and install the application.

Wi-Fi Function

Download Programme

Download new and specialized programmes that are not included in the standard programmes on the appliance. Appliances that have been successfully registered can download a variety of specialty programmes specific to the appliance.

Only one programme can be stored on the appliance at a time. Once programme download is completed in the appliance, the appliance keeps the downloaded programme until a new programme is downloaded.

Push Alerts

When the programme is complete or the appliance has problems, you have the option of receiving push notifications on a smartphone.

Smart Diagnosis™

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

NOTE

- If you change your wireless router, Internet service provider, or password, delete the registered appliance from the **LG ThinQ** application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.

Wireless LAN Module Specifications

Model	LCW-004
Frequency Range	2412 to 2472 MHz
Output Power (Max)	IEEE 802.11b: 17.82 dBm IEEE 802.11g: 17.72 dBm IEEE 802.11n: 16.61 dBm

Wireless function S/W version : V 1.0

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Standby Power Consumption

Standby power consumption	0.5 W
Network standby power consumption	2.0 W
The period of time after which the power management function, or a similar function, switches the equipment automatically into standby and/or off mode and/or the condition providing networked standby	20 min.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

WARNING

- Unplug the appliance before cleaning to avoid the risk of electric shock. Failure to follow this warning can cause serious injury, fire, electrical shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They will damage the finish.

Regular Cleaning

Cleaning the Interior and Exterior

Proper care of your appliance can extend its life.

- 1 Clean the inside and outside of the appliance with a damp cloth.
 - Glass cleaner can be used to clean the front glass panel, but spray it on a cloth and wipe rather than spraying it directly on the panel.
- 2 Buff the door dry with a clean, dry cloth to prevent any water stains.
- 3 Allow the interior and exterior to dry completely before plugging in and operating the appliance.

CAUTION

- Do not spray water directly on the appliance.
- Do not use detergent, methylated spirits, solvents, or any volatile liquids to clean the exterior of the appliance.
- Never use steel wool or abrasive cleansers; they can damage the surface.
- Keep sharp objects away from the exterior of the appliance. The touch panel may not work if damaged.

Cleaning the Lint Filter

Always remove the lint from the filter after every programme. If the lint filter has become very dirty or clogged, wash the lint filter in warm, soapy water and allow to dry thoroughly before reinstalling it.

- Never operate the appliance without the lint filter.
- Never operate the appliance with a wet lint filter.

Cleaning the Aroma Filter

For best results, wash the aroma filter using hot water and dish soap. After cleaning, wipe the filter with a clean cloth and allow it to dry thoroughly before reinstalling it.

The aroma filter can also be cleaned in the top rack of the dishwasher.

- Never operate the appliance without the aroma filter.
- Never operate the appliance with a wet aroma filter.

Cleaning the Water Tanks


The water in the water supply tank contacts the clothing and items treated in the appliance directly. Clean both tanks periodically and keep them clean at all times. If the tanks are not properly cleaned, they may start to smell or need to be replaced.

- Some discolouration of the water drain tank may occur over time. This is normal and will not affect product performance.
- Use only clean tap water in the supply tank for best performance and to prolong the life of the appliance. Do not use distilled water.
- Do not reuse the water from the water drain tank in the water supply tank.


- 1 Clean the exterior of the tanks with a wet cloth.
- 2 Please clean the inside of the water tanks with water by using a brush cleaning the water tanks.



- 3 Make sure the drainage nozzle ❶ connected to the water drain tank and the water supply hole ❷ connected to the water supply tank are not clogged.

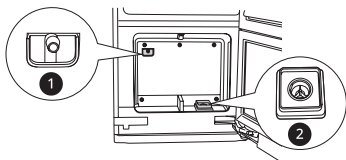

- 4 Allow the outsides of the tanks to dry completely before reinstalling the tanks.

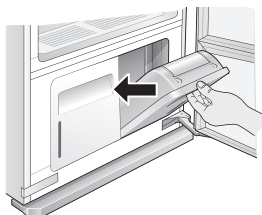

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to LG Electronics service centre.

Before Calling for Service

Your appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If your appliance does not function properly or does not function at all, check the following before you call for service.

Error Messages

Symptoms	Possible Cause & Solution
Fill Water icon is blinking.	Water supply tank is empty or tank is missing. Fill the water supply tank and reinstall it.
Empty Water icon is blinking.	Water drain tank is full or tank is missing. Empty the water drain tank and reinstall it.
[dE] error message shows on the display.	Door is not completely closed. Check that items are completely inside the cabinet and that the door is tightly closed.
[AE], [LE], [LE2], [E1], [E4], [TE1], [TE2], [TE3] or [TE5] error message shows on the display.	System error. Unplug the appliance and call for service.

Operation

Symptoms	Possible Cause & Solution
The appliance won't operate.	Control panel has powered off due to inactivity. This is normal. Touch the Power button to turn the appliance on.
	Cord is unplugged. Make sure cord is plugged securely into a working outlet.
	Circuit breaker/fuse is tripped/blown. Check house circuit breakers/fuses. Replace fuses or reset breaker. The appliance should be on a dedicated branch circuit.
	Appliance is not connected to 220-240 V socket. Make sure the cord is plugged into a grounded socket rated for this appliance.
The programme won't start.	Start/Pause was not touched after the programme was set. Touch Start.
	Programme is producing steam. There may be a period of inactivity while steam is produced.
	Control panel is locked. Disable the Control Lock function and touch Start.
Smoke comes out when the door is opened.	Door is opened during operation. It is normal for steam or hot air to escape if the door is opened during operation.
Full water supply tank is empty after just one use.	Appliance is being used for the first time. A larger amount of water is needed the first time the appliance is used to fill the empty reservoir.
Appliance makes a loud vibrating noise on startup.	Moving hanger is balancing load before operation. This is normal at the beginning of the programme. If the noise increases or continues for a long time, call for service.
Styling times are taking longer than estimated.	Clothes were extremely wet when loaded. Styling times may be longer for very wet or bulky clothing. Dry damp clothes before putting them in the appliance. The appliance stops automatically when clothes are dry.
Appliance is moving from left to right while operating.	Floor under appliance is not level or is not sturdy enough to support the weight of the appliance without flexing. Install the appliance where the floor is level and sturdy. Compensate for any slight unevenness in the floor with the levelling legs.

Symptoms	Possible Cause & Solution
Sound of motor whirring.	Compressor is running during styling. This is normal.
Sound of water running, boiling, or hissing.	Steam is being generated and sprayed onto clothes. This is normal.
Steam or hot air leaks out when the door is closed.	An item is caught in the door, keeping it slightly open. Make sure all items are completely inside the cabinet and nothing is caught in the door, blocking it from closing completely.
Control panel won't respond.	Control panel or button has dirt on it. Dirt or foreign objects on the control panel will interfere with the operation of the buttons. Clean the control panel.
	Control panel is locked. Disable the Control Lock function.

Performance

Symptoms	Possible Cause & Solution
Clothes are wet at the end of the programme.	Filter is clogged or grill is upside down. Clean the lint filter. Insert the grill with the holes on the right side.
	Door gasket is damaged. If the rubber door gasket is damaged, it leaves a gap in the door seal, affecting performance of the appliance. Call for service.
	Clothes are caught in door. Make sure all items are completely in the cabinet and not stuck in the door, blocking it from closing completely. Run the programme again.
Odour is not removed at end of programme.	Clothes were stored for a long period of time or are stained with a strong-smelling substance. Odours can be particularly difficult to remove from clothes that have been stored for long periods or have strong-smelling, oily stains. Wash the clothes first, before using the appliance.
Wrinkles are not reduced at end of programme.	Clothes were stored for a long period of time. Wrinkles may be very difficult to reduce if set for a long time, especially in cotton and linen fabrics. Iron clothes that have been stored for a long period of time before treating them with the appliance, to reduce wrinkles more effectively.

Symptoms	Possible Cause & Solution
Clothes have an unpleasant odour at end of programme.	Appliance has not been used for a long time or water tanks and filters have not been cleaned. Check for dirt or foreign objects in the water supply and water drain tanks. Clean the filters and water tanks..
Functions are not operating properly.	Detergent or fabric softener put in water supply tank. Do not use anything but clean water in the water supply tank.
Wrinkles at back of neck after programme.	Item too large for hanger or fabric too delicate. Use the right size hanger for the item so the fabric won't bunch up and cause wrinkles. Some fabrics are delicate and will bunch around the hanger no matter what you do. Use the shelf for lingerie and other delicate items.
Creases are gone from pants after programme.	Pants were hung on the moving hanger, not in the pants press. Hang pants in the pants press to maintain creases at edge of pants legs.
Clothing has water spots after programme, colour has faded or run.	Fabric is not washable, or is not colourfast. Check fabric care labels before treating items.

WI-FI

Symptoms	Possible Cause & Solution
Your home appliance and smartphone is not connected to the Wi-Fi network.	The password for the Wi-Fi that you are trying to connect to is incorrect. Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	Mobile data for your smartphone is turned on. Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly. The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
	The router frequency is not 2.4 GHz. Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far. If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

Memo



使用者手冊

智能電子衣櫃



開始安裝前，請仔細閱讀這些操作指引。這將簡化安裝過程，保證產品正確並且安全安裝。將這些操作指引放置在產品旁，以便以後參考。

S3*F*

www.lg.com

Copyright © 2019 - 2021 LG Electronics Inc. All Rights Reserved

目錄

本手冊可能包含與您購買的型號不同的影像或內容。
本手冊以製造商的修訂版本為準。

安全說明	3
使用前請閱讀所有說明	3
重要安全說明	3
安裝	8
配件與規格	8
安裝地點要求	10
拆開電器包裝	12
校平電器	13
操作	16
操作概述	16
放入衣物的準備工作	18
放入每一批衣物前檢查濾網	19
檢查水箱	20
將衣物放入電器	20
控制面板	27
程序表	29
可選程序與額外功能	34
智能功能	36
使用 LG ThinQ 應用程式	36
維護	38
定期清潔	38
疑難排解	40
致電要求維修前	40

使用前請閱讀所有說明

下列安全指引是為防止無法預見的危險或由於不安全或不正確的電器操作方式造成的損失。

如下所述，指引分為「警告」和「注意」兩部份。

安全訊息

 顯示此標誌指示可能造成危險的事物和操作。仔細閱讀帶有此標誌的部份，遵循操作指引以避免危險。

警告

這表示不遵循操作指引會造成重傷或死亡。

注意

這表示不遵循操作指引會造成輕傷或電器損壞。

重要安全說明

警告

在使用本電器時，為了降低火災或爆炸、觸電、財物損毀、人員受傷或死亡的風險，應遵循以下基本的安全預防措施：

家中的兒童

身體、感知或心理能力較弱者或缺乏經驗及知識的人群（包括兒童）不宜使用該電器，除非有負責其安全的人員給予有關使用本電器的監督或指引。應監督兒童，避免其將本電器當作玩具。

安裝

- 安裝或重新安置本電器前請聯絡授權服務中心，避免移動電器時造成受傷或產品損壞。
- 將本電器從牆邊挪開時，小心不要輾軋或損壞電源線。
- 本電器非常重。移動和安裝時必須由至少兩人協力合作，防止損壞或受傷。
- 使用前，確保已將本電器連接至適用於該電器的專用接地電源插座。使用者應將標準 2 孔牆面插座更換為標準 3 孔牆面插座。
- 使用前，必須按照此手冊所述說明正確安裝本電器。如果本電器未正確接地，則可能導致觸電。
- 請勿將本電器安裝在可能有物體墜落的危險之處。本電器不適合在船舶或飛機上使用。若要在其他特殊情況下使用，請諮詢授權的 LG 服務中心。
- 請勿亂按控制鍵。
- 請在牢固且平坦的地板上安裝本電器。如果安裝在不穩定的表面上，該電器可能因過度震動而翻倒，造成損壞或受傷。
- 運輸本電器時請妥善保護正面。請勿從正面裝載上貨車。電器正面的強化玻璃面板可能碎裂，造成損壞和受傷。
- 將本電器正確接地以符合所有管制規範和條例。遵循安裝說明的詳細資料。如果本電器未正確接地，則可能導致觸電。
- 安裝和儲存本電器之處的氣溫不得低於冰點或暴露於戶外。如果本電器在冬季或零度氣溫以下交付，請在使用前使電器恢復到室溫。
- 請勿自行修理或更換本電器的任何零件，除非使用者維護說明有特別指示，或閣下瞭解使用者修理說明中特別註明的內容，而且具備執行該等建議的技能。如果未遵循此警告，可能造成重傷、火災、觸電或死亡。
- 為了降低觸電風險，請勿在潮濕的地方安裝本電器，例如浴室。如果未遵循此警告，可能造成死亡、重傷、火災、觸電或產品變形或發生故障。
- 拆除所有包裝材料並正確處理所有裝運材料。否則可能導致燒傷、火災、爆炸或死亡。
- 連接至額定、受保護及大小合適的電源電路，避免電氣超負荷。不適當的電源電路可能熔化，造成觸電和／或火災危險。
- 如電源線損壞，必須由製造商或其服務代理商或有同樣資格的人員更換，以避免危險。
- 將所有包裝材料置於遠離兒童的地方。包裝材料可能會危害兒童安全。造成窒息的危險。

- 請勿安裝在爐具、烤箱或加熱器等其他熱源附近。如果未遵循此警告，可能造成產品變形、冒煙或火災。
- 請勿將蠟燭、菸草製品或其他易燃物放在電器上。可能導致蠟滴、冒煙或火災。
- 從電器撕下所有塑料保護膜。如果未遵循此警告，可能造成產品損壞、冒煙或火災。
- 本電器應按照各國接線規定進行安裝。

操作

- 請勿讓兒童在電器上或電器內玩耍。在兒童附近使用本電器時，必須密切監督兒童。
- 請勿攀爬、站立或吊掛在電器的櫃門、擱架或其他任何位置。電器可能翻倒、損壞或發生其他損壞或受傷。
- 請勿踩在水箱門上。電器可能翻倒，從而造成損壞或受傷。
- 請勿將重物或危險物品放在電器上。
- 請勿將活體動物放入電器內。
- 使用時請勿讓兒童爬入電器內。
- 如有漏氣（丙烷/LPG）現象，請確保該區域充分通風，並在恢復使用前聯絡授權服務中心。請勿接觸或拆解電器的電源插座。
- 請勿在電器附近使用或存放易燃物質（化學品、藥品、化妝品等）或在電器內儲存這些物質。請勿將電器緊鄰著易燃氣體放置。
- 如聽到噪音、聞到奇怪氣味或發現電器冒煙，請立即斷開電源線。
- 發生淹水時：電器底座被水淹沒時請勿靠近。應立即聯絡服務中心。可能發生觸電或火災。
- 請勿使用衣物柔順劑或類似產品消除靜電，除非衣物柔順劑或類似產品的製造商建議。
- 運轉期間請勿讓雙手或身體靠近蒸氣噴嘴。蒸氣溫度很高，可能導致受傷。
- 請勿將物體塞入蒸氣噴嘴。可能引致過多噪音和火災。
- 請勿飲用供水箱或排水箱的水。
- 請勿拆解或改動電器。
- 請勿將雙手、腳或金屬物體放在電器下方。

- 請勿用濕手操作電器或觸摸電源線。
- 請讓手指遠離夾點區域；櫃門與衣櫃之間的空隙必然很小。兒童在附近時，請小心關門。
- 身體、感知或心理能力較弱者或缺乏經驗及知識的人群（包括兒童）不宜使用電器，除非有負責其安全的人員給予有關使用電器的監督或指引。
- 請勿將沾染食用油的衣物放入電器中。否則可能發生化學反應，進而造成衣物起火。
- 請勿烘乾先前已被汽油、乾洗溶劑或其他易燃或易爆物質清洗、洗滌、浸泡或弄髒的衣物，因為衣物散發的蒸氣可能點燃或發生爆炸。
- 請勿利用加熱烘乾含有泡沫橡膠或類似橡膠材質的衣物。
- 請勿在運轉期間打開櫃門。可能對電器性能造成不良影響。如電器安裝在地毯上或附近，則逸出的熱風或蒸氣形成的冷凝可能污染或損壞地毯。
- 請將電器用於指定用途。因電器用於本使用者手冊中未指定的用途而造成損壞，不屬於有限保養範圍內。

維護

- 定期擦除電源插頭插腳和觸點上的異物（例如灰塵、水）。清潔插頭時請勿使用濕布。
- 請勿使用某種設備烘乾內部。請勿點燃蠟燭去除內部氣味。
- 清潔時請勿直接往電器噴水。可能引發火災或觸電。
- 使用後，請用乾布擦拭內部。
- 每次放入衣物前後均需清潔棉絨濾網。
- 請勿對電器外部使用漂白劑，例如氧基或氯基漂白劑。
- 清潔或操作控制鍵時，請勿使用尖銳的物體。可能發生觸電。
- 避免使用重物撞擊前玻璃面板。雖然由強化玻璃製成，但受到強烈撞擊時，面板可能碎裂並導致受傷。
- 確保產品遠離齧齒動物、昆蟲及其他異物。它們可能啃咬電線，引發火災或觸電。

處理

- 處理或丟棄電器前，將櫃門移至烘乾室。拔出電源插頭，摧毀按鈕區域，防止重複利用。

使用電器的技術安全


- 請勿在任何情況下切除或移除電源線的接地插腳。電源線必須插入正確接地的插座，以防造成人身傷害或損壞電器。
- 本電器必須插入 AC 220-240 V、50 Hz 的接地插座，該插座應由 15 A 保險絲或斷路器保護。如果未遵循此說明，可能造成火災、爆炸或死亡。
- 本電器必須插入正確接地的插座。如該電器未正確接地，可能造成觸電。請有資格的電工檢查牆面插座和電路，確保插座已正確接地。如果未遵循此等說明，可能造成觸電危險及／或火災危險。
- 將電器安裝在插頭易於插拔之處。不使用時請拔出電器插頭，避免引發火災或觸電危險。
- 拆解或修理前請拔出電器插頭，避免引起觸電危險。
- 請務必將電器插入額定電壓與銘牌上額定值相符的獨立插座。這將提供最佳性能，還可防止室內接線電路過負荷導致電線過熱，引起火災危險。
- 請勿使用延長線連接至插座。否則可能引致火災或觸電。
- 切勿通過拉扯電源線來拔出電器插頭。請務必緊抓插頭，從插座上筆直拔出。電源線可能損壞，從而引致火災和觸電危險。
- 請及時聯絡 LG 或有資格的維修人員修理或更換所有磨損或其他損壞的電源線。請勿使用電線本身或兩端出現裂紋或磨損的電線。電源線可能熔化，引致觸電和／或火災危險。
- 安裝或移動電器時，小心不要擠壓、壓碎或損壞電源線。這可防止電器因火災和觸電損傷或損壞。

接地說明

- 錯誤連接設備接地導體可能導致觸電風險。如果您懷疑電器是否正確接地，請諮詢有資格的電工或維修人員。
- 本電器必須接地。如果出現故障或停機，接地將透過提供適用於電流的最小電阻路徑減少觸電風險。
- 本電器配有一條擁有設備接地導體和接地插頭的電源線。插頭必須插入按照當地所有法規和條例正確安裝和接地的適當插座中。
- 請勿改動插頭。如果插頭不適合插座，請由有資格的電工正確安裝插座。
- 本電器必須連接至接地金屬、永久接線系統或設備接地導體必須透過電路導線運作，並且連接至電器的設備接地端或導線。如果電器未正常接地，則可能導致觸電。

配件與規格

前視圖

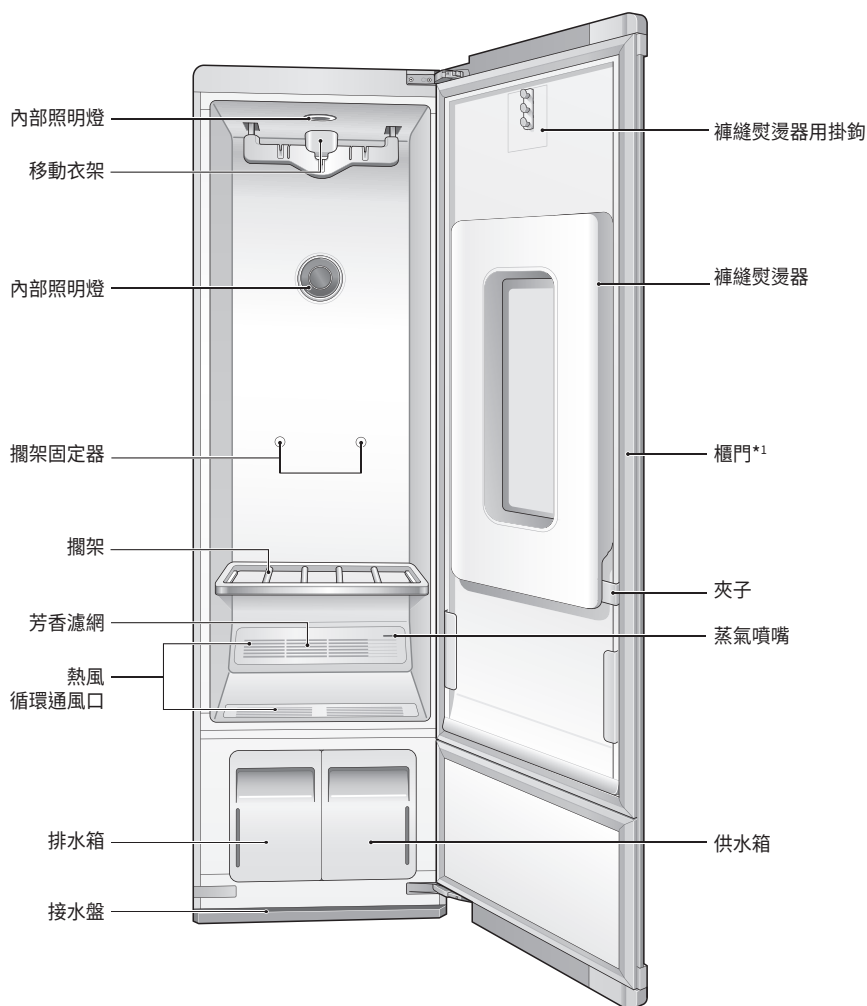


*1: 櫃門方向可由安裝人員根據安裝位置進行轉換。

規格

外觀及本手冊中列出的規格可能因產品持續改進而有所不同。

型號	S3*F*
電源要求	請參閱有關詳細資訊的額定標牌
尺寸	445 mm (闊) X 585 mm (深) X 1850 mm (高), 1010 mm (此值是櫃門打開狀態下測量)
產品重量	78 kg
功耗	1700-1900 W
最大容量	4 件衣物

 附件




擱架



接水盤




2 個衣架*1

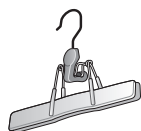

褲架*1



 2 個防滑墊



2 個後帽蓋



扳手



2 個鉸鏈蓋

*1: 如果掛鉤厚度小於 4 mm, 可以使用普通的金屬/塑料衣架。掛鉤必須緊密貼合移動衣架上的凹槽。如果貼合不緊, 則可能引致晃動、產生噪音並損壞衣服。

附註

- 附件如有缺損, 請聯絡購買時的商店或 LG 客服。
- 為了您的安全並延長產品壽命, 必須使用授權部件。因另行購買未授權的部件或零件而導致產品發生故障或意外, 製造商概不負責。


安裝地點要求

在安裝電器之前，請檢查以下資訊以確保電器應安裝在正確位置。

安裝位置

- 接地電源插座應位於電器 61 cm 範圍內。
- 地板應穩固並足以支撐電器的總重量 78 kg。還應考慮其他洗衣電器的重量。
- 地板必須平坦，電器下方的坡度應控制在 2.5 cm 以下。如果大於 2.5 cm，則無法正常調平機器。
- 請確認電器安裝好後，即使發生故障亦便於工程師檢查機器。
- 請勿將電器安裝在會暴露於水的場所及／或戶外。如果未遵循此警告，可能引致觸電、受傷或產品損壞或故障。
- 請勿將電器安裝在空心或活動平台上。否則可能造成過多噪音和振動，如果電器翻倒會導致損壞或受傷。


間隙

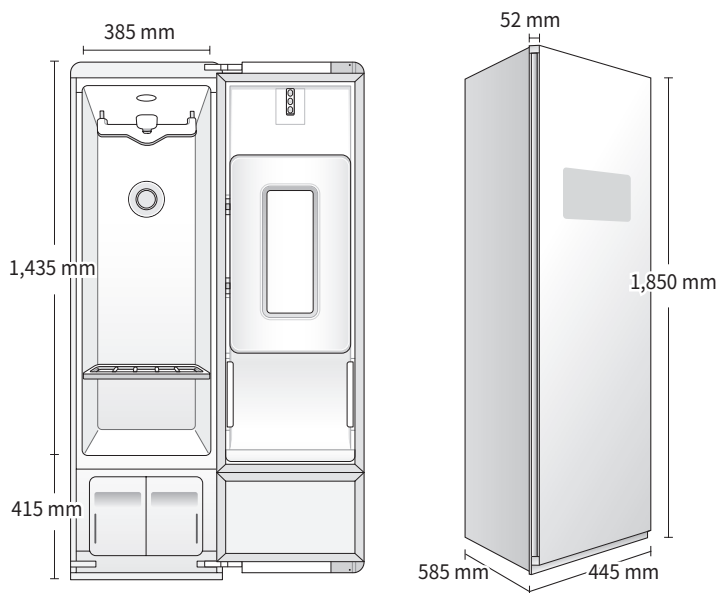

建議安裝間距

以下是本電器的建議安裝間隙。雖然已對本電器的兩側與後側留出 3 cm 間隙進行測試，但考慮到下列原因，建議的安裝間隙應為：


- 正面至少留出 46 cm，方便打開櫃門。
- 電器兩側和後側與牆壁之間至少距離 5 cm。
- 電器頂部與天花板之間至少距離 20 cm。
- 如果電器與相鄰物品距離太近，會降低性能，並加大耗電量。
- 為了減少電器發出噪音，應考慮在電器的四面留出額外空間。

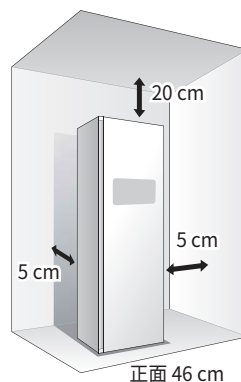

嵌入式區域或壁櫥安裝的安裝間距

本電器（或任何其他電器）周圍應至少留出一定空間，避免運轉期間碰到牆壁、家具或其他電器。電器四面應至少留出 3 cm，避免噪音增大或損壞。

- 安裝在帶門的壁櫥內時，壁櫥門上下必須預留最小通風口。也可採用具有等效通風口的百葉窗門。
- 嵌入式安裝的最小通風口面積為 200 cm^2 。

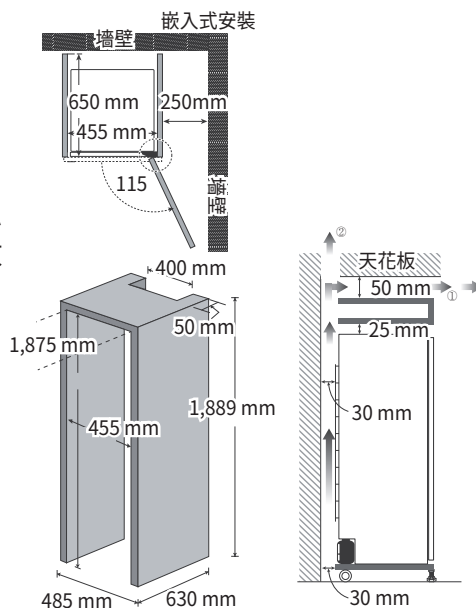


壁櫥通風要求

壁櫥門上下必須有通風口，防止壁櫥內積聚熱氣與濕氣。

所示範例為採用壁櫥門的通風格柵。

- 必須在離地 185 cm 以上的位置安裝一個最小面積為 310 cm² 的上通風口。
- 必須在離地 30.48 cm 以下的位置安裝一個最小面積為 155 cm² 的下通風口。

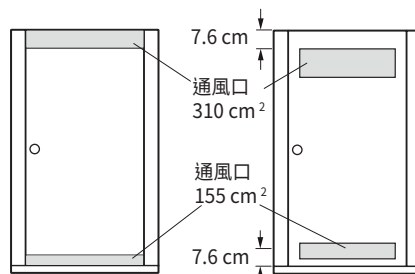

壁櫥門通風要求

電氣連接

- 安裝在靠近插座之處。
- 使用獨立的接地插座：220–240 V，50 Hz，AC，最低 8 A。

警告

- 請勿將本電器與多台電器插入同一插座。室內接線超負荷可能造成火災危險。
- 請勿將本電器安裝在潮濕區域，以降低觸電危險。

環境溫度

- 溫度必須介於 10°C 至 35°C 之間。
- 如環境溫度過低或過高，則可能影響性能。
- 請勿安裝在陽光直射或溫度可能低於 0°C 的場所。

拆開電器包裝

移除紙箱和裝運材料

從紙箱拆開電器包裝，然後撕下膠帶及臨時固定標籤。

- 請勿撕下任何警告標籤、型號及編號標籤，或位於電器正面底部的技術規格標籤。

警告

- 拆開電器包裝及移動時應由至少兩人協力合作。否則可能因電器翻倒造成重傷。

注意


- 請勿使用鋒利器具、外用酒精、易燃液體或腐蝕性清潔劑去除膠帶或膠水。這些物品可能損壞電器表面。

附註

- 在黏著處滴少許洗碗精，然後用手指摩擦也可以輕鬆去除膠帶或膠水殘留物。使用溫水擦拭並乾燥。

移動電器

使用電器底部的滑輪 ❶ 移動。從正面大約一半的位置緩慢推動電器。

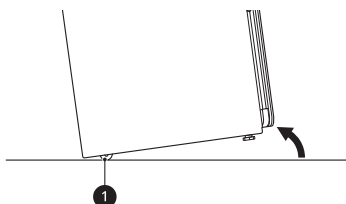

⚠ 注意

- 移動電器時，請保持直立。如果將電器一側放平，則製冷劑可能洩漏並造成電器故障。

校平電器

檢查平穩

校平電器，防止不必要的噪音、振動及移動。安裝後檢查電器是否完全平穩。

調平並校平電器

⚠ 警告


- 電器非常重。校平時需要由至少兩人協力合作。如果未遵循此警告，可能造成重傷或死亡。

1 將電器安置在最終位置，檢查並確認機器已平穩。

- 所有調平腳必須穩固安放在地板上。輕輕推動電器的四角，確保各邊角沒有搖晃。確保前調平腳與地面之間沒有縫隙。

2 使用扳手（電器隨附）轉動調平腳。


- 鬆開前調平腳升高電器，擰緊則降低。如果僅使用前調平腳無法校平電器，請將電器傾斜，安裝兩個後調平腳。安裝調平腳時請勿將電器放倒。
- 使用調平腳升高或降低電器，直到電器兩側及前後保持平穩。

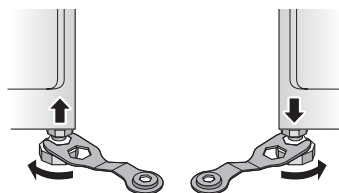

⚠ 注意

- 確保所有調平腳都緊貼地板。如在未校平的情況下使用電器，則電器可能翻倒，導致受傷、損壞或產品故障。
- 請僅根據需要調整調平腳來校平電器。不必要地伸長調平腳可能導致電器晃動。

3 電器完全平穩且所有調平腳都穩固安放在地板上時，擰緊固定螺母 ❶。

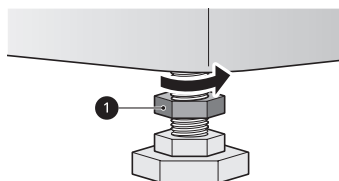

轉換櫃門方向

可以轉換櫃門方向。如有需要，請在安裝時由安裝人員執行此操作。


附註

- 安裝之後如需改變櫃門方向，請聯絡 LG 客戶資訊中心。

使用防滑墊

防滑墊可在打開或關閉櫃門時防止電器搖晃或偏移。

- 1 清潔地板，安裝防滑墊。
 - 使用乾抹布清除異物或水分。如殘留水分，防滑墊可能打滑。
- 2 將電器放在安裝區域後調整水平度。
- 3 將防滑墊的黏著面 ❶ 放在地板上。

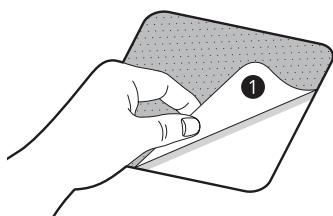

- 4 將電器放在防滑墊上。
 - 請勿將防滑墊的黏著面 ❶ 貼在電器的調平腳上。

- 5 再次檢查電器的水平度。

- 輕推或晃動電器邊緣，確保其沒有搖晃。如電器搖晃，請再次執行校平。


附註

- 移除防滑墊時可能留下黏膠殘留物。這些殘留物可使用酒精來去除。

組裝接水盤

使用電器前，請將接水盤插入衣櫃底部。

- 1 握住接水盤，使其正面的箭頭和字母朝上。
- 2 先插入接水盤的一側，再插入另一側。推動接水盤，直到完全滑入到位。

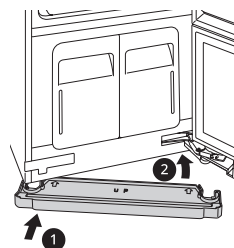


- 3 取出時，先拉出一側，再拉出另一側。
 - 如果接水盤有積水，將其拆下並清空水分。清空後，重新裝回接水盤。

! 注意

- 請勿在未安裝接水盤的情況下運轉電器。否則可能因滲漏導致產生水漬。


安裝帽蓋

- 1 將帽蓋的凸部與衣櫃頂角的孔對齊，然後將帽蓋按入到位。
- 2 重複上述操作，將餘下的帽蓋安裝到其他角上。

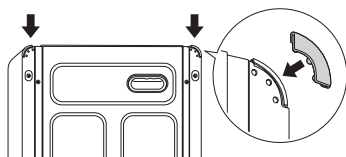

安裝鉸鏈蓋

- 1 打開電器的櫃門。
- 2 將鉸鏈蓋按入上鉸鏈組件，使彎曲邊緣位於鉸鏈較遠的一側。

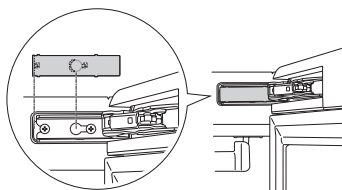

- 3 重複上述操作，將餘下的鉸鏈蓋安裝到下鉸鏈組件。

 
操作概述

使用電器



1 準備衣物。

- 如有需要，先清洗衣服。
- 不得放入對高溫敏感或接觸水即損壞的衣物。
- 將衣物放在衣架或擱架上。
- 扣緊鈕扣或拉上拉鍊，將衣物固定在移動衣架上，防止損壞。



2 清潔棉絨濾網，更換芳香濾網的芳香片。

- 取出濾網，清除上一批衣物殘留的棉絨，可達到更快更高效的性能。重新裝回濾網，關閉格柵時檢查是否對齊。請勿在棉絨濾網未安裝到位時運轉電器。如果芳香濾網內使用衣物柔順片，每次使用後請更換。



3 檢查水箱。

- 如有需要，往供水箱加水。如有需要，清空排水箱。供水箱中務必使用乾淨的自來水，以提高產品性能並延長使用壽命。



 
4 將衣物放入電器。

- 請注意衣物護理標籤和程序選擇。如果所選程序不適合衣服類型，可能導致衣服縮水或嚴重損壞。
- 取出所有空衣架，避免產生噪音、摩擦及損壞衣服。



5 開機。

- 輕觸**電源**按鈕開機。



6 選擇程序。

- 輕觸程序切換按鈕，選擇所需的程序與設定。



7 啟動程序。

- 按住**啟動／暫停**按鈕，啟動程序。再次輕觸**啟動／暫停**按鈕，可隨時暫停程序。請在暫停後的 14 分鐘內重新啟動程序，否則電器會關機，設定也將丟失。請勿在程序運行期間打開櫃門。如果蒸氣或熱風從打開的櫃門逸出，可能會在地板或牆壁上形成冷凝，從而導致損壞或發黴。

⚠ 注意

- 請勿在運轉期間打開櫃門。逸出的熱風或蒸氣可能造成燙傷或受傷。
- 運轉期間，應避免蒸氣或熱風逸出衣櫃。運轉期間打開櫃門也會影響性能、延長護理時間並導致地板上出現冷凝水和積水。

8 程序結束。

程序結束後取出衣物。將櫃門保持打開，使熱風散出。櫃門打開 1.5 分鐘後，內部照明燈熄滅。

放入衣物的準備工作

檢查衣物護理標籤

大多數衣物都帶有正確護理說明的衣物護理標籤。以下是部分與選擇本電器相關項目的符號。

護理標籤上的符號

標籤	含義	可否
	手洗	✓
	機洗，標準程序	✓
	免燙處理／抗皺	✓
	輕柔／柔軟衣物	✓
	不可洗滌	✓ ^{*1}
	常溫	✓
	免燙處理／抗皺	✓
	輕柔／柔軟衣物	✓
	不可使用滾筒烘乾	✓
	不可烘乾	否
	繩子晾乾／掛乾	✓
	滴乾	✓
	平放晾乾	✓
	高熱	✓
	中熱	✓
	低熱	✓
	不可加熱／風乾	否

*1: 標示不可洗滌的衣物，例如皮草和皮衣，可使用本電器進行保養。

將衣物分類

- 為了使織物護理達到最佳效果，請務必將護理要求類似的織物集中處理。
- 不同織物的護理要求不同，某些織物不可使用特定程序處理或應該分開處理。

放入衣物前的檢查事項

某些衣物不適合使用本電器。為此類衣物選擇錯誤的程序可能導致面料損壞。


- 檢查所有口袋，確保口袋空無一物。夾子、鋼筆、硬幣和鑰匙等物品會損壞本電器及衣服。
- 請勿將對高溫敏感或不適合水洗的衣物放入使用蒸氣處理的智能電子衣櫃程序。只能使用 **Gentle Dry (溫和烘乾)** 程序。
- 毛皮、皮革（僅 100% 天然皮革）只能使用 **Fur/Leather Care (毛皮／皮革護理)** 程序處理。此程序屬於可下載程序。
- 將嚴重污染或髒衣服放入電器前，請先進行清洗。本電器不具備洗滌功能。程序運作期間分解的污垢或污漬可能在衣物之間相互串染。
- 請分開處理有難聞氣味的衣物。程序運作期間氣味可能在衣物之間相互串染。
- 應將衣物牢牢固定，拉上拉鍊並扣緊鈕扣，防止衣物在程序運作期間從移動衣架上掉落。
- 請勿將非常潮濕的衣物放入本電器烘乾。將衣物放入衣櫃進行烘乾前，請抖乾或擰乾多餘水分。如果衣櫃內灑入大量水，護理性能會受到影響或造成電器損壞。

放入每一批衣物前檢查濾網

檢查棉絨濾網


開始放入新一批衣物前，請務必確認棉絨濾網是否清潔；堵塞的棉絨濾網會延長護理時間。

- 1 打開前格柵 ①，取出棉絨濾網 ②。

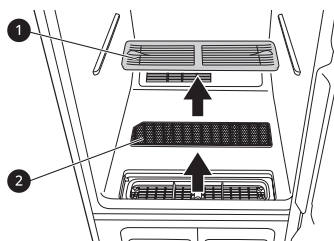

- 2 使用軟刷輕刷棉絨濾網，或使用吸塵機清潔。


- 如果棉絨濾網破裂或損壞，請更換新濾網。

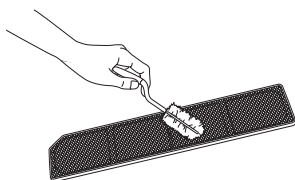

- 3 重新裝回濾網。

⚠ 注意


- 插入格柵時，請檢查兩側是否對齊。

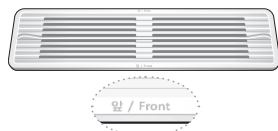


更換芳香片

使用乾衣機衣物柔順片，為衣物增添清新香味。每次使用後請更換衣物柔順片。

- 1 從電器中取出芳香濾網。

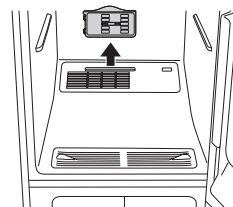


- 2 打開芳香濾網，將乾衣機衣物柔順片 ① 放入其中。

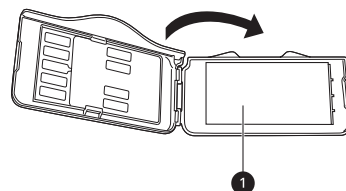

- 3 關上芳香濾網，將其裝回電器。

- 按照箭頭所示方向，插入芳香濾網。可使用調節桿調整芳香濾網的開口。芳香濾網的開口愈大，香味愈濃。

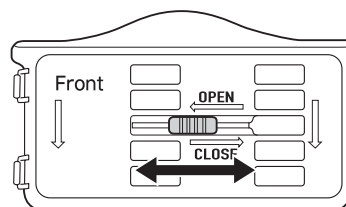

- 4 程序完成後，取出芳香濾網，丟棄衣物柔順片。


附註

- 將香水噴灑在化妝棉上 4-5 次，然後將化妝棉放入芳香濾網中，以供使用。（但香味強度視乎香型而異。）

檢查水箱

使用前檢查水箱的水量。使用本電器前，供水箱必須加滿水。無水的狀態下本電器無法運轉。每次使用前應清空排水箱。

- 1 向前拉水箱的手柄，取出水箱。檢查水箱的水位。

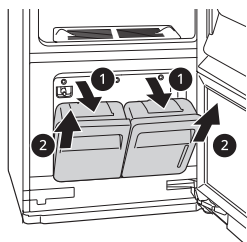

- 2 確保供水箱已加滿水。

- 視乎使用的程序而定，加滿水的供水箱可使用大約四次。
- 使用乾淨的自來水或瓶裝水，以達到最佳性能並延長產品壽命。請勿使用蒸餾水或排水箱中的回收水。
- 第一次使用本電器時，加滿水的供水箱會使用三分之二的水量。之後程序的用水量將減少。

注意

- 供水箱只能加入水。加入洗滌劑或衣物柔順劑等任何其他物質可能損壞本電器。
- 只能使用乾淨的自來水或瓶裝水。水中的異物可能縮短本電器的使用壽命。
- 請勿使用蒸餾水。水傳感器可能無法運作。
- 請勿重複利用排水箱的水給供水箱加水。

- 3 確保排水箱已清空。

- 4 使用大約三次後，排水箱將裝滿。護理程序期間水箱裝滿的速度會更快。如果排水箱已滿，本電器將無法運轉。

- 隨著時間推移排水箱可能發生輕微變色。這是正常情況，並不會影響產品性能。

將衣物放入電器

警告


- 打火機或火柴等易燃物可能點燃，引致火災。如果未遵循此警告，可能造成火災、爆炸或死亡。
- 切勿對沾染燃油、汽油或其他易燃物的衣物進行護理。清洗衣物將無法完全去除油類殘留物。如果未遵循此警告，可能造成火災、爆炸或死亡。

選擇適合衣物的護理方式

衣物	護理方式
西裝外套、輕便夾克	移動衣架
外套、夾克(短)	
外套(長)	
連衣裙(短)	移動衣架(移除擱架)
連衣裙(長)	
短裙	移動衣架
薄毛毯、沙發罩	
嬰兒毛毯	
褲子(無褲縫)	
短褲	
童裝	
圍巾	移動衣架或擱架
領帶	
披肩	
女性內衣	移動衣架或擱架(若是柔軟材質)
襯衫, 女式襯衫	
褲子(有褲縫)	褲縫熨燙器
鴨舌帽、禮帽	擱架
絨毛玩具	
枕頭	
毛衣	
針織衣物	
嬰兒衣物	

移動衣架

使用本電器隨附的衣架將衣服掛在移動衣架上, 或使用任何可牢固鉤入移動衣架凹槽的塑料或金屬衣架。

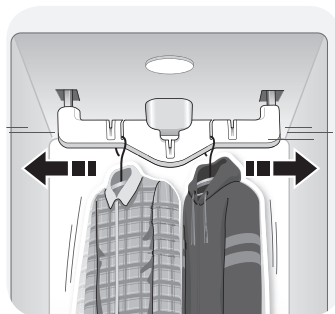

- 對於西裝、外套、夾克、女式襯衫、連衣裙、短裙以及不需要褲縫的褲子, 請使用移動衣架。使用褲縫熨燙器給褲子燙出摺縫。
- 任何可牢固放在衣架上以及不會因蒸氣或烘乾留下衣架痕跡或其他不易損壞的物品均可放在移動衣架上。
- 毛衣或針織衣物應放在擱架上護理, 以免留下衣架痕跡。
- 如有可能, 請將衣服整理擺好, 以免碰到衣櫃兩側或背面。衣櫃內表面可能形成冷凝, 如果衣物與表面接觸, 程序結束時衣物可能仍然潮濕。將大件衣物掛在移動衣架的斜凹槽上。
- 即使僅使用擱架, 移動衣架也會移動。

⚠ 注意

- 啟動程序前, 從移動衣架上取下所有空衣架, 將其放在擱架上。空衣架可能發出不必要的噪音、摩擦並損壞織物。
- 請勿靠在移動衣架上或拉扯移動衣架。

- 以同一方向將衣架掛在移動衣架上，防止相互碰撞。
- 請勿讓兒童玩弄或吊在移動衣架上。電器可能翻倒，導致損壞或受傷。


使用移動衣架

- 1 將衣架插入凹槽並向下拉，確保牢牢鉤住。

- 鉤子應緊密貼合凹槽，防止運轉期間發出噪音、晃動或損壞衣物。

- 2 對於大件衣物，請使用斜凹槽 ② 和 ④。

- 同一程序運作期間，請勿同時使用斜凹槽和標準凹槽。衣架可能相互碰撞，導致損壞衣物。

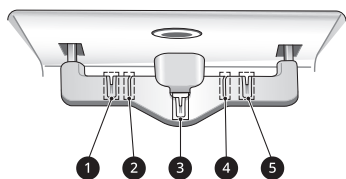

- 3 衣物之間不要過度擁擠。

- 衣物越少，護理效果越好。碰到衣櫃兩側的衣物可能沾染冷凝物且無法充分護理。

衣架的使用方法

本電器隨附的衣架只能用於本電器。掛鉤厚度小於 4 mm 以及可穩固鉤入移動衣架凹槽的任何塑料或金屬衣架均可用於本電器。

- 請勿對羊毛織物、針織衣物或柔軟的女性內衣使用衣架。衣服可能變形或留下衣架痕跡。
- 某些衣服的衣領後面可能出現皺褶。

- 對於大碼或大件衣物，請使用移動衣架的衣架斜凹槽。

- 運轉期間取出空衣架或將其放在擱架上。

- 吊掛衣物時扣緊鈕扣，拉上拉鍊，防止運轉期間從衣架上掉落。沒有鈕扣或拉鍊的衣物，請用棉繩固定衣領區域。

- 吊掛長款衣物時，請取出或儲存擱架，以免衣物起皺。

- 1 選擇適當的衣架。

- 選擇適合吊掛衣物的專用衣架。

- 2 所有衣服需扣緊鈕扣，拉上拉鍊，掛在衣架上。

- 這樣做有助於程序運作期間防止衣服掉落或起皺。沒有鈕扣或拉鍊的衣服，請用棉繩固定衣領周圍。




- 3 將衣架放入移動衣架的凹槽。



褲架


視乎褲腿是否需要褲縫而定，將褲子放在移動衣架上或褲縫熨燙器上。

- 將褲子掛在移動衣架上，可能會去除褲腿的褲縫。
- 如要維持褲腿的褲縫，請使用褲縫熨燙器。
- 使用褲縫熨燙器時，確保褲腰不超過 96 cm，褲長不超過 110 cm。使用褲縫熨燙器前，請檢查褲子尺寸。如果太大，則使用移動衣架。
- 衣服的面料會影響去皺效果。
- 請使用預設下載的額外褲裝護理程序，以獲得最佳去皺效果。

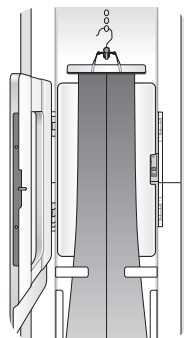


打開／閉合褲架

- 1 將鉤子向褲夾方向(向下)折疊以鬆開，即可打開，然後分開褲夾。

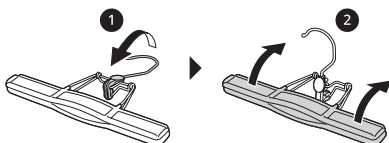


- 2 放入褲子後，將褲夾閉合，向上轉動鉤子，使褲夾鎖入到位。

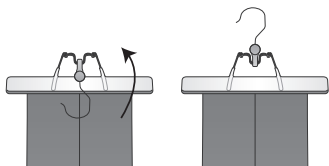

將褲子掛在褲架上

- 1 取出褲子口袋的所有物品，扣上後袋鈕扣。
- 2 沿褲縫線(或褲縫線應在的位置)折疊褲子，使用褲架夾住褲腿末端。

- 3 輕輕拉平褲腿兩側。確定衣架內的褲子拉緊，沒有皺褶，且不會在程序運作期間掉出。

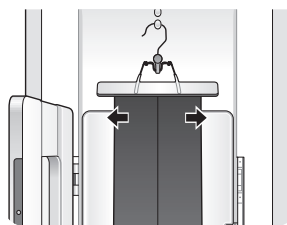

- 4 將褲架放在移動衣架上或褲縫熨燙器上。




褲縫熨燙器

使用本電器隨附的褲架或任何符合櫃門上褲縫熨燙器上方掛鉤的褲架，將衣服掛在褲縫熨燙器上。

⚠ 注意


- 請勿靠在褲縫熨燙器的門上或吊掛重物。電器可能翻倒，導致損壞或受傷。
- 請勿讓兒童玩弄或吊在褲縫熨燙器的門上。電器可能翻倒，導致損壞或受傷。
- 關閉褲縫熨燙器的門時，讓手指遠離夾點區域。請監督附近兒童，防止受傷。

1 按下側面的圖示，打開褲縫熨燙器。

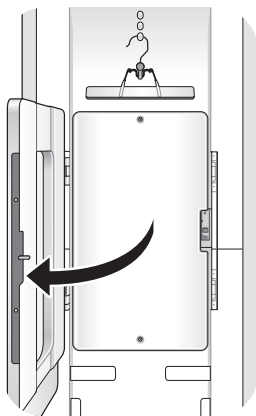

2 將褲架掛在褲縫熨燙器上方最適合熨燙褲子的鉤子上。


- 如果褲子較長，請使用更高處的鉤子，避免褲子碰到衣櫃底面。

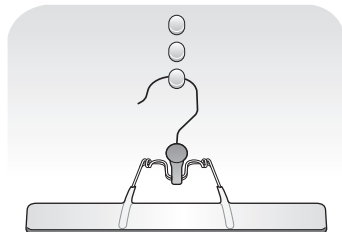

- 確保褲腰不超過 96 cm，褲長不超過 110 cm。使用褲縫熨燙器前，請檢查褲子尺寸。如果太大，則使用移動衣架。


3 確定褲子筆直吊掛。

- 檢查褲腿的褲縫，確保對齊。關閉褲縫熨燙器前，用 2 個夾子固定褲子。如果褲腿未正確對齊或褲子未筆直吊掛，褲子邊緣可能出現雙重線條或褲子可能起皺。

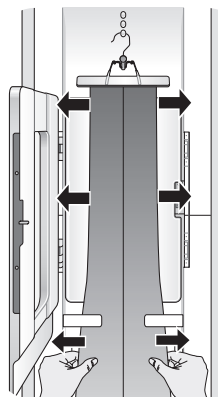

4 關閉褲縫熨燙器，然後再次拉直褲子。

- 輕輕拉平褲子邊緣，撫平皺褶。確定褲子筆直吊掛在褲縫熨燙器中。

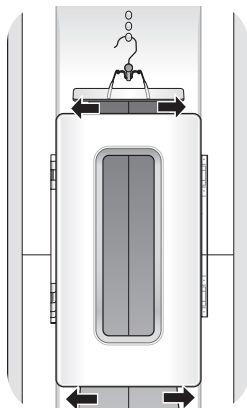

附註

- 以同一程序處理其他衣物時，可能壓住褲子。
- 為了避免產生雙重褲縫，請使用移動衣架執行強力程序，去除所有刀形褶後，再使用燙褲機。
- 為了達到最佳效果，請使用專為褲縫熨燙器功能而設計的額外褲裝護理程序。可使用 LG ThinQ 應用程式下載本程序並用作下載程序。

擱架

護理衣服或其他難以吊掛的物品時，或可能因吊掛護理而損壞時，請使用擱架。

⚠ 注意

- 請勿讓兒童攀爬或吊在擱架上。擱架可能掉落或電器翻倒，導致損壞或受傷。


- 請勿將重物放在擱架上或使用擱架存放物品。擱架可能掉落，導致損壞或受傷。

附註


- 對於在衣架上烘乾可能留下衣架痕跡、變形或出現其他損壞的毛衣、針織衣物、女性內衣或柔軟的女式襯衫，請使用擱架。
- 為了達到最佳護理效果，請勿在擱架上堆疊衣物。請單件護理或將衣物並排放置，並在之間留下空隙。
- 不使用時，將擱架存放在衣櫃背面的擱架固定器旋鈕上。
- 如有可能，請將擱架上的衣物整理擺好，以免碰到衣櫃兩側或背面。衣櫃內表面可能形成冷凝，如果衣物與表面接觸，程序結束時衣物可能仍然潮濕。

組裝擱架

- 1 握住擱架，將灰色邊朝前。

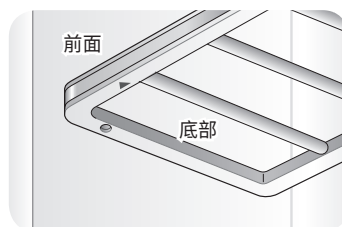

- 2 將左側擱架凹槽插入左側擱架支撐架上，然後將右側擱架凹槽插入右側擱架支撐架上。

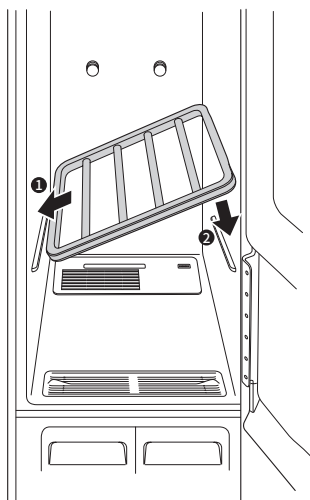



附註

- 擱架無法透過滑入衣櫃進行組裝。組裝不當將可能掉落。

- 3 拆下時，提起擱架右側，然後從擱架支撐架上拉出擱架左側。

附註


- 處理外套或連衣裙等長款衣服時，將擱架掛在擱架固定器上。

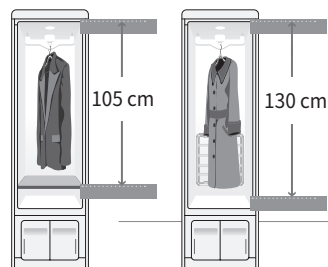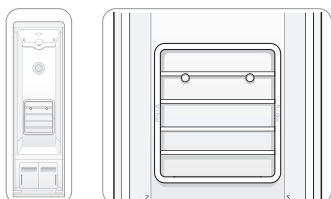

存放衣架

運轉期間從移動衣架取下未使用的衣架，並將其放在擱架上。這可避免出現噪音和衣物損壞。

- 1 將衣架插在擱架的橫桿之間。

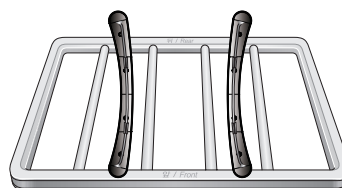

- 2 處理長款衣服時，如果擱架存放在擱架固定器上，運轉期間請將衣架拿到電器外部存放。

- 3 請勿使用擱架存放重物。




控制面板

控制面板利用靜電對輕觸作出反應。只需輕觸即可進行操控。清潔控制鍵時請使用軟布，避免接觸並啟動按鈕。控制鍵上有異物、戴手套或透過抹布輕觸按鈕可能妨礙按鈕啟動。

控制面板功能

視乎型號而定，下列某些功能可能無法使用。

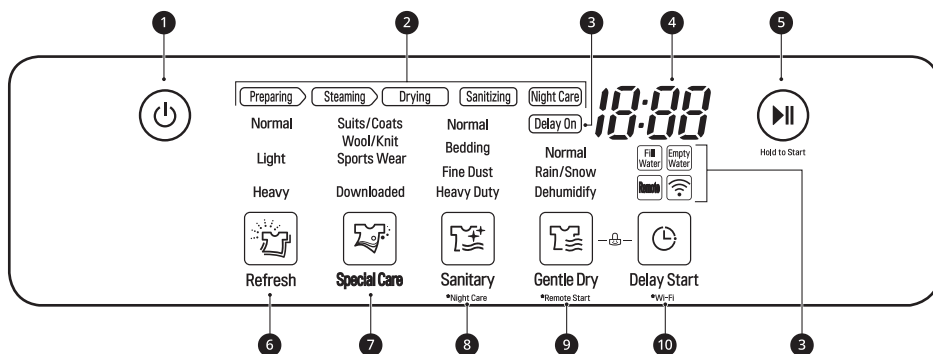

1 電源按鈕

輕觸**電源**按鈕開機／關機。程序結束後，如未輕觸任何按鈕，本電器將在幾秒後自動關機。

附註

- 程序運作期間輕觸**電源**按鈕，將取消該程序，且程序設定也會丟失。

2 程序流程指示

顯示螢幕的此部分將顯示當前執行的護理程序階段。

3 選項和通知指示

- **預約開啟**：設定**Delay Start (預約開始)**功能時燈會亮起。
- **Fill Water (加水)**：沒有供水箱或為空時燈會亮起。
- **Empty Water (排水)**：沒有排水箱或裝滿時燈會亮起。
- **Remote (遠控)**：設定**Remote Start (遠端啟動)**功能時燈會亮起。
- **Wi-Fi**：設定 Wi-Fi 功能時燈會亮起。

4 LCD 顯示螢幕

顯示螢幕顯示預計的剩餘時間、本電器的錯誤訊息。程序執行時間可能因使用情況而異。

5 啟動／暫停按鈕

按住以啟動所選程序。如果本電器正在運轉，輕觸此按鈕可暫停程序而當前設定不會丟失。

附註

- 如在程序暫停後一小時內未輕觸**啟動／暫停**按鈕來恢復程序，則本電器將自動關閉。

6 清新除臭程序

- 輕觸按鈕，選擇**Refresh (清新除臭)**程序。
- 重複輕觸以切換設定。

7 特殊護理程序

- 輕觸按鈕，選擇**Special Care (特殊護理)**程序。
- 重複輕觸以切換設定。
- 下載的設定有 5 種預設程序。使用智能手機的 LG ThinQ 應用程式下載新的程序。

8 殺菌／持久呵護

- 輕觸按鈕，選擇**Sanitary (殺菌)**程序。重複輕觸以切換設定。
- 按住按鈕 3 秒鐘可啟用／停用**Night Care (持久呵護)**功能。

9 溫和烘乾程序切換／遠端啟動

- 輕觸按鈕，選擇**Gentle Dry (溫和烘乾)**程序。重複輕觸以切換設定。
- 按住 3 秒鐘，啟動遠控功能。

10 預約開始／Wi-Fi

- 為程序設定預約開始時間。執行**Night Care (持久呵護)**程序時，無法選擇此選項。
- 按住按鈕 3 秒鐘可啟用／停用 Wi-Fi 功能。

程序表

程序專為不同情況而設計。選擇最適合衣物成份及所需效果的程序和設定，以達到最佳性能與織物護理。

護理程序指南

程序	Refresh (清新除臭)
設定	Normal (常溫) / Light (輕微) / Heavy (強力) 使用此程序可去除異味及皺褶並烘乾衣物。此程序會使用蒸氣並僅適用於可洗滌衣物。非常適用於可洗滌的羊毛織物和針織衣物。
面料／衣物	西裝、外套、校服、圍巾、羊毛織物、針織衣物、戶外服／演出服、毛巾、內衣、T 恤衫、襪子、牛仔褲、牛仔夾克、女性內衣、運動裝、桌布

程序	Special Care (特殊護理)
設定	Suits/Coats (西裝／外套): 專用於快速去除西裝及外套的異味。
	Wool/Knit (羊毛／針織): 專用於消除羊毛衫／針織衫的皺褶。
	Sports Wear (運動裝): 用於保護運動裝的面料。
	Downloaded (下載程序): 下載的設定有 5 種預設程序。使用智能手機的 LG ThinQ 應用程式下載新的程序。
說明	使用此程序可去除西裝、針織衣物等特殊類型衣服上的異味及皺褶。您還可以下載額外程序並使用該程序處理毛皮和皮革等特殊面料。

程序	Sanitary (殺菌)
設定	Normal (常溫) / Bedding (寢具) / Fine Dust (精緻衣物) / Heavy Duty (厚重衣物) 使用此程序可去除細菌並烘乾衣物。此程序適用於衣服、寢具及童裝與絨毛玩具。被子或毛毯只能單層，且重量在 1.5 kg 或以下。

面料／衣物	西裝、外套、校服、圍巾、戶外服／演出服、毛巾、內衣、T 恤衫、襪子、牛仔褲、牛仔夾克、女性內衣、運動裝、桌布
附註	● 請勿對羊毛織物或針織衣物使用此程序，因為高溫 and 蒸氣可能造成其縮水。 ● 天然纖維必須標示可洗滌／可手洗及滾筒烘乾，以免縮水。 ● 請勿使用含有橡膠、泡沫或有黏性的衣物。

程序	Gentle Dry (溫和烘乾)
設定	Normal (常溫) : 使用此設定可去除羊絨織物等不可洗滌面料的異味及皺褶並烘乾衣物。
	Rain/Snow (雨／雪) : 此設定用於烘乾潮濕衣物。

附註

- 護理前請查看本手冊及衣物護理標籤上的**衣物護理指南**。
- 某些衣物可能仍殘留皺褶。因長期存放造成的皺褶可能難以去除。棉質或亞麻衣物的皺褶可能無法完全去除。如有需要，可在護理結束後進行熨燙。
- 某些氣味難以去除。蒸氣難以滲透油性物質散發的氣味。因長期存放而散發的氣味也難以去除。
- 程序時間視乎使用環境而異，包括水溫。
- 非常厚的衣服可能在程序結束時未均勻烘乾。
- 對於未脫水的濕衣服，程序的護理時間可能更長。
- 如果使用**Refresh (清新除臭)**或**Gentle Dry (溫和烘乾)**程序，請確保面料可洗滌／可手洗。

每個護理程序的流程細節

- **Preparing (蒸氣預備)**: 此流程加熱水箱中提供蒸氣的水。
- **Steaming (蒸氣)**: 此流程將蒸氣噴到衣物上。
- **Drying (烘乾)**: 此流程去除衣物的水分。
- **Sanitizing (殺菌)**: 此流程去除衣物的細菌。

程序		護理流程			
程序	設定	蒸氣預備	蒸氣	烘乾	殺菌
Refresh (清新除臭)	Normal (常溫)	●	●	●	
	Light (輕微)	●	●	●	
	Heavy (強力)	●	●	●	
Special Care (特殊護理)	Suits/Coats (西裝／外套)	●	●	●	
	Wool/Knit (羊毛／針織)	●	●	●	
	Sports Wear (運動裝)	●	●	●	
	Downloaded (下載程序)				
Sanitary (殺菌)	Normal (常溫)	●	●	●	●
	Bedding (寢具)	●	●	●	●
	Fine Dust (精緻衣物)	●	●	●	●
	Heavy Duty (厚重衣物)	●	●	●	●
Gentle Dry (溫和烘乾)	Normal (常溫)			●	
	Rain/Snow (雨／雪)	●	●	●	
	Dehumidify (除濕)			●	

附註

- 如在運轉期間將Sanitary (殺菌)程序更改為Refresh (清新除臭)或Gentle Dry (溫和烘乾)程序，將不會執行殺菌流程。

衣物護理指南

面料與衣物	程序			
	Refresh (清新除臭)		Sanitary (殺菌)	Gentle Dry (溫和烘乾)
	去除皺褶	去除異味		
棉質 毛巾、襪子、內衣、牛仔褲、運動裝、T 恤衫、毛毯		●	●	●
亞麻、大麻纖維、苧麻纖維 夏季衣物、桌布		●	●	●
羊駝毛、駝毛、羊絨 外套、西裝	●*1	●*1	●*1	●*1
圍巾、針織衣物		●*1		●
毛皮、皮革 外套、圍巾	● 使用從 LG ThinQ 應用程式下載的特殊程序護理皮革、皮衣。但是皮革應屬於僅 100% 天然皮革 (非人造皮革)			
絲綢 領帶、絲帶、圍巾、女式襯衫、絲絨／毛絨	● 不要護理絲綢衣服。			
羊毛 毛衣、針織衣物		●*1		●
冬天外套、西裝、運動裝、制服	●	●	●	●
醋酸纖維 西裝襯裡、女式襯衫、領帶、睡衣	●	●	●	●
丙烯酸纖維 保暖內衣、針織衣物	●	●	●	●
尼龍 長筒襪、女性內衣	●	●	●	●

面料與衣物	程序			
	Refresh (清新除臭)		Sanitary (殺菌)	Gentle Dry (溫和烘乾)
	去除皺褶	去除異味		
聚氨酯纖維 (含量低於 5%) 有彈力的衣物	●	●	●	●
人造纖維 西裝襯裡	●	●	●	●

*1: 使用前請檢查衣物上的衣物護理標籤。

附註

- 面料的重量與裝飾各種各樣，每種類型的護理要求也各不相同。本手冊很難充分涵蓋所有衣物。使用本電器處理任何衣物前，請檢查護理標籤。
- 請勿使用**Refresh (清新除臭)**或**Sanitary (殺菌)**程序處理易褪色、對高溫敏感或不適合水洗的衣物。先在一小塊、不顯眼的地方（內部接縫）進行水漬測試，確定該面料不褪色。如需進一步協助，請聯絡衣服製造商、乾洗專業人員或查閱更詳細的衣物護理指南。
- 使用本電器處理非常潮濕或褪色的衣物，可能導致衣物損壞或衣櫃內部染上衣服顏色。這些污漬不會影響本電器的運轉。可使用牙膏去除衣櫃內部的污漬。
- 本電器不具備洗滌功能。使用前請清洗髒污的衣物。

可選程序與額外功能

兒童鎖

使用此功能可防止本電器被亂用或避免運轉期間更改程序設定。

- 1 按住**Gentle Dry (溫和烘乾)**和**Delay Start (預約開始)**按鈕 3 秒鐘，啟用或停用按鍵鎖功能。
- 2 LCD 顯示螢幕上顯示 ，除**電源**按鈕以外，所有控制鍵將停用。

附註

- 該功能不會鎖住櫃門。
- 即使斷電，該功能也會保留。
- 設定後，該功能會保持啟用狀態，直到手動停用。若要運行其他程序，必須停用該功能。

預約開始

使用此功能預約程序的開始時間。

- 1 輕觸**電源**按鈕。
- 2 選擇程序並設定。
- 3 輕觸**Delay Start (預約開始)**按鈕，設定程序的開始時間。
 - 預約時間預設為 3 小時。每次輕觸按鈕，時間會增加一小時，可預約最多 19 小時。
 - 按住按鈕，更快速增加預約時間。

持久呵護

此功能適用於整夜存放衣物或在程序結束後無法立即取出衣物。該功能會間歇性地吹送暖風，避免冷凝，使衣物保持溫暖和乾燥，直到將其取出。

- 1 將衣服放入本電器。
- 2 選擇程序並設定。
- 3 按住**Sanitary (殺菌)**按鈕 3 秒鐘，啟用**Night Care (持久呵護)**功能。
- 4 輕觸**啟動／暫停**。
- 5 輕觸其他程序按鈕可取消該功能。

附註

- 設定後，該功能會在所選程序結束後啟動。
- 此功能無法緊隨**Gentle Dry (溫和烘乾)**程序之後設定。
- 如果輕觸**電源**按鈕，該設定將丟失。
- 該功能最長可運行 24 小時。
- 該功能運行期間可隨時打開櫃門，即使正在吹風也是安全的。
- 持久呵護功能在間歇性地吹送暖風時會發出噪音，此乃正常現象。

Dehumidify (除濕)

對安裝本電器的房間進行除濕。輕觸**Gentle Dry (溫和烘乾)**按鈕，可將房間除濕時間設定為 2 小時或 4 小時。

如果排水箱已滿，會顯示通知圖示並發出報警。請清空排水箱，輕觸**啟動／暫停**按鈕繼續除濕。

- 使用**Dehumidify (除濕)**設定時，無法使用**Night Care (持久呵護)**功能。
- 使用時將櫃門打開 45°。如果櫃門緊閉，則程序將無法運行。
- 視乎環境而定，排水箱可能在**除濕**程序結束之前就已裝滿。
- 室溫可能會因本電器吹出的氣流而升高。

Downloaded (下載程序)程序

下載其他程序並使用該程序處理毛皮和皮革等特殊面料，減少噪音或消除靜電。

選擇想要的程序

- 1 輕觸**電源**按鈕。
- 2 重複輕觸**Special Care (特殊護理)**按鈕，直到**Downloaded (下載程序)**設定亮起。
- 3 輕觸**啟動／暫停**按鈕。

附註

- 一次只能儲存並變更一個下載的程序。
- 在智能手機下載並使用 **LG ThinQ** 應用程式，確認當前下載的程序或下載其他程序。

有 5 種預設程序。


- **TrouserWrinkleCare (褲裝皺褶護理)**
：集中撫平皺褶並凸顯褲縫。
- **Fur/Leather Care (毛皮／皮革護理)**
：去除皮草／皮衣上的濕氣與灰塵，而不損傷面料，可以恢復毛皮因存放及每天穿著而被壓扁的蓬鬆感。
- **Static Removal (消除靜電)**：利用蒸氣技術快速消除靜電。

- **Jean Care (牛仔護理)**：對易染色或掉色的牛仔褲進行清潔管理。
 - 牛仔褲可能會掉色，因此請使用褲架夾住後掛在移動衣架上。
- **Down Jacket Care (羽絨服護理)**：對因存放而被壓縮或者磨損而沒有任何重大污染的棉服進行呵護，確保其溫暖如初。
 - 如將多件厚重棉服放入本電器，其護理性能可能因電器內部氣流干擾而受到影響。建議一次放入一件棉服。


使用 LG ThinQ 應用程式

LG ThinQ 使用前需檢查的事項

- 1 檢查本電器與無線路由器 (Wi-Fi 網絡) 間的距離。
 - 如電器與無線路由器間的距離過遠，訊號強度會變弱。可能需耗費較長時間方可註冊，或安裝可能失敗。
- 2 關閉智能手機的**流動數據**或**流動網絡**。

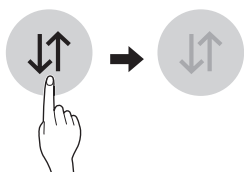

- 3 將智能手機連接至無線路由器。

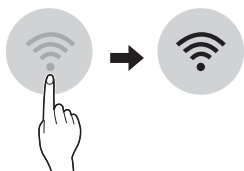

附註

- 如您要檢查 Wi-Fi 連線情況，請查看控制面板上的 Wi-Fi 圖示是否亮起。
- 本電器僅支援 2.4 GHz Wi-Fi 網絡。如需了解您的網絡頻率，請聯絡互聯網服務提供者或參考無線路由器手冊。
- **LG ThinQ** 不負責任何網絡連接問題或任何故障、功能不良或因網絡連接造成的錯誤。

- 如本電器無法連接 Wi-Fi 網絡，可能是離路由器過遠。請購買 Wi-Fi 中繼器（範圍延伸器）改善 Wi-Fi 訊號強度。
- Wi-Fi 可能因為家中網絡環境而失敗或中斷。
- 視乎互聯網服務提供者而定，網絡連接可能無法正常運作。
- 四周無線環境會使無線網絡服務執行緩慢。
- 由於無線訊號傳輸問題，本電器無法註冊。拔出電器插頭並等待約一分鐘的時間，然後再試一次。
- 如已啟用無線路由器上的防火牆，請停用防火牆或新增為例外裝置。
- 無線網絡名稱 (SSID) 應為英文字母與數字的組合。（請勿使用特殊字元。）
- 智能手機用戶介面 (UI) 可能因流動操作系統 (OS) 與製造商而異。
- 如果路由器的安全協議設定為 **WEP**，則可能無法設定網絡。請將其更改為其他安全協議（建議使用 **WPA2**）並重新註冊本電器。

安裝 LG ThinQ 應用程式

從智能手機的 Google Play 商店或 Apple App 商店尋找 **LG ThinQ** 應用程式。請按照說明下載並安裝。

Wi-Fi 功能

下載程序

下載本電器標準程序中未包含的全新及專用程序。已成功註冊的電器可以下載該電器專屬的各種專用程序。

一次只能在電器上儲存一個程序。完成程序下載後，電器會保留下載的程序，直到下載新的程序為止。

推送通知

程序結束或電器發生問題時，您可選擇在智能手機上接收推送通知。

Smart Diagnosis™

此功能基於使用模式為診斷及解決電器的問題提供有用資訊。

附註

- 如您已更換無線路由器、互聯網服務提供者或密碼，請從 **LG ThinQ** 應用程式中刪除之前註冊的電器並重新註冊。
- 應用程式會因應性能提升而有所變更，恕不另行通知。

無線 LAN 模組規格

型號	LCW-004
頻率範圍	2412 至 2472 MHz
輸出功率 (最大)	IEEE 802.11b: 17.82 dBm IEEE 802.11g: 17.72 dBm IEEE 802.11n: 16.61 dBm

S/W 版本的無線功能：1.0 版

考量用戶之故，本設備應在設備和身體之間最短 20 cm 距離安裝和操作。

待機功耗

待機功耗	0.5 W
網絡待機功耗	2.0 W
電力管理功能或類似功能之後的一段時間，設備將自動切換到待機及／或關機模式及／或提供網絡待機狀態	20 分鐘

開放來源程式碼軟件

若要依據 GPL、LGPL、MPL 及其他開放原始碼授權取得對應的原始碼，請瀏覽 <http://opensource.lge.com>。

除了開放原始碼，所有涉及的授權條款、免責聲明和版權聲明均可供下載。

LG 電子也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 opensource@lge.com。此服務提供的有效期限為本產品最後裝運日起計算的三年。此服務提供的有效對象為收到此資訊的任何人。

⚠ 警告

- 清潔本電器之前，拔出插頭，避免觸電風險。如果未遵循此警告，可能造成重傷、火災、觸電或死亡。
- 切勿使用刺激性化學物質、研磨型清潔劑或溶劑清潔本電器。它們可能損壞拋光面。

定期清潔

清潔內部和外部

正確保養閣下的電器可延長使用壽命。

- 1 用濕布清潔本電器的內部和外部。
 - 可使用玻璃清潔劑，清潔前玻璃面板，但需噴灑到布上再擦拭，而不要直接噴灑在面板上。
- 2 使用乾淨、乾燥的布擦乾櫃門，防止出現水漬。
- 3 請等待內外部完全乾燥後，再接通電源及運轉本電器。

⚠ 注意

- 請勿直接往本電器上噴水。
- 請勿使用洗滌劑、甲基化酒精、溶劑或任何揮發性液體清潔本電器外部。
- 切勿使用鋼絲絨或研磨型清潔劑；它們可能損壞表面。
- 將鋒利的物品遠離本電器外部。如有損壞，觸控面板可能無法運作。

清潔棉絨濾網

務必在每個程序結束後清除濾網上的棉絨。如果棉絨濾網變得非常髒或堵塞，可使用溫肥皂水清洗棉絨濾網，使其充分乾燥後再重新裝回。

- 切勿在沒有棉絨濾網的狀態下運轉本電器。
- 切勿在棉絨濾網潮濕的狀態下運轉本電器。

清潔芳香濾網

為了達到最佳效果，請使用熱水和洗碗精清洗芳香濾網。清潔後，使用乾淨的布擦拭濾網，使其充分乾燥後再重新裝回。也可將芳香濾網放在洗碗機的上層碗架進行清潔。

- 切勿在沒有芳香濾網的狀態下運轉本電器。
- 切勿在芳香濾網潮濕的狀態下運轉本電器。

清潔水箱

供水箱中的水會直接接觸本電器處理的衣服和物品。請定期清潔兩個水箱並隨時保持乾淨。如未正確清潔水箱，則可能發出臭味或需要更換。


- 隨著時間推移排水箱可能發生輕微變色。這是正常情況，並不會影響產品性能。

- 供水箱中只能使用乾淨的自來水，以達到最佳性能並延長本電器壽命。請勿使用蒸餾水。
- 請勿重複利用排水箱的水放入供水箱使用。


- 1 使用濕布清潔水箱外部。
- 2 請使用刷子清潔水箱，用水清潔水箱內部。



- 3 確保已連接至排水箱的排水噴嘴 ❶ 和連接至供水箱的供水孔 ❷ 未堵塞。

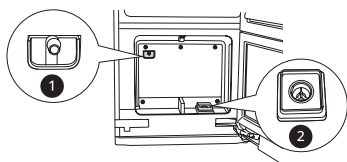

- 4 使水箱外部完全乾燥後，再重新裝回水箱。

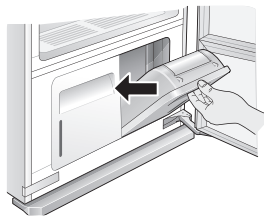

電器的操作可能導致錯誤和故障。下表包含解決錯誤訊息或故障的可能原因和注意事項。建議您仔細閱讀下表，以節省致電 LG 電子服務中心所需的時間和金錢。

致電要求維修前

本電器已配備錯誤自動監控系統，可在初期進行檢測並診斷問題。如果本電器不能正常運轉或完全無法運轉，在致電維修中心前請先檢查以下事項。

錯誤訊息

癥狀	可能原因與解決方案
Fill Water (加水)圖示閃爍。	供水箱為空或沒有水箱。 • 向供水箱中加水，並重新裝回。
Empty Water (排水)圖示閃爍。	排水箱已滿或沒有水箱。 • 清空排水箱，並重新裝回。
顯示螢幕出現 [dE] 錯誤訊息。	櫃門未完全關閉。 • 確認衣物完全位於衣櫃內部，且櫃門緊閉。
顯示螢幕出現 [AE]、[LE]、[LE2]、[E1]、[E4]、[TE1]、[TE2]、[TE3] 或 [TE5] 錯誤訊息。	系統錯誤。 • 拔出電器插頭，並致電維修中心。

操作

癥狀	可能原因與解決方案
電器不運轉。	控制面板由於不活動而關閉電源。 • 這是正常情況。輕觸 電源 按鈕開機。
	電線未插入插座。 • 確保電線已牢固插入工作插座。
	斷路器／保險絲斷路／燒斷。 • 檢查室內斷路器／保險絲。更換保險絲或複位斷路器。本電器應連接至專用分支電路。
	本電器未連接至 220-240 V 插座。 • 確保電源線已連接至本電器額定的接地電源插座。
程序不啟動。	設定程序後，未輕觸 啟動／暫停 按鈕。 • 輕觸 啟動 。
	程序執行期間產生蒸氣。 • 產生蒸氣時可能有一段時間不活動。
	控制面板被鎖住。 • 停用按鍵鎖功能並輕觸 啟動 。
櫃門打開時有煙霧散出。	運轉期間櫃門被打開。 • 如果運轉期間打開櫃門，有蒸氣或熱風逸出是正常情況。
使用一次後，加滿水的供水箱就空了。	電器是第一次使用。 • 第一次使用電器時，為了加滿空的水箱，會需要更多水。
啟動時本電器發出較大振動噪音。	運轉前，移動衣架為了實現衣物平衡。 • 這是程序啟動時的正常情況。如果噪音變大或持續很長時間，請致電維修中心。

癥狀	可能原因與解決方案
護理時間比預計時間長。	放入了非常濕的衣物。 對於非常濕或大件衣物，護理時間可能較長。將衣物放入電器前，確定衣物半乾。衣物烘乾後，本電器會自動停止。
運轉期間電器左右移動。	電器下方的地板不平坦或不夠穩固，應確保地板足以支撐電器的重量而不彎曲。 將電器安裝在平坦且穩固的位置。如果地板稍微不平，可用調平腳調整地板的輕微不平。
電機發出呼呼聲。	護理期間壓縮機處於運轉中。 這是正常情況。
發出水流聲、沸水聲或嘶嘶聲。	正在產生蒸氣，並噴灑到衣服上。 這是正常情況。
櫃門關閉後有蒸氣或熱風漏出。	衣物卡在櫃門上，將櫃門略微打開。 確保所有衣物完全放入衣櫃內，沒有東西卡在櫃門上，妨礙櫃門完全關閉。
控制面板沒有反應。	控制面板或按鈕上有髒污。 控制面板上有污垢或異物，會影響按鈕操作。請清潔控制面板。
	控制面板被鎖住。 停用按鍵鎖功能。

性能

癥狀	可能原因與解決方案
程序結束時衣服仍潮濕。	濾網堵塞或格柵裝反。 清潔棉絨濾網。裝入格柵，使孔位於右側。
	櫃門封條損壞。 如果櫃門橡膠封條損壞，關閉櫃門後會有縫隙，影響電器性能。請致電維修中心。
	衣物卡在櫃門上。 確保所有衣物完全放入衣櫃內，沒有東西卡在櫃門上，妨礙櫃門完全關閉。再次運程序。
程序結束時異味未去除。	衣服存放時間過長或沾染了氣味強烈的物質。 如果衣物存放時間過長或沾染了氣味強烈的油性污漬，則很難去除該氣味。使用電器前，先清洗衣物。
程序結束時皺褶未去除。	衣物存放時間過長。 如果衣物存放時間過長，則很難去除皺褶，尤其是棉麻面料。使用本電器處理存放時間過長的衣物前，請先進行熨燙，有效減輕皺褶。
程序結束時衣物仍有難聞的氣味。	電器長期未使用，或水箱和濾網沒有清潔。 檢查供水箱和排水箱的髒污或異物。清潔濾網和水箱。
功能運行不正常。	供水箱中放入了洗滌劑或衣物柔順劑。 供水箱中只能使用乾淨水，請勿使用其他物質。
程序結束後，衣領反面有皺褶。	衣物對於衣架而言太大，或面料過於柔軟。 使用適合衣物尺寸的衣架，衣物就不會捲成一團或起皺。某些面料極其柔軟，無論如何都會捲繞在衣架上。對於女性內衣和其他柔軟的衣物，請使用擱架。
程序結束後，褲子上的褲縫消失。	褲子被掛在移動衣架上，而不是褲架上。 將褲子掛在褲架上，保持褲腿邊緣的褲縫。

癥狀	可能原因與解決方案
程序結束後衣物上有水漬、褪色或染色。	面料為不可洗滌或衣物褪色。 處理前請檢查衣物護理標籤。

WI-FI

癥狀	可能原因與解決方案
閣下的家用電器和智能手機未連接至 Wi-Fi 網絡。	嘗試連接的 Wi-Fi 密碼不正確。 找到智能手機連接的 Wi-Fi 網絡，並移除，然後在 LG ThinQ 上註冊本電器。
	智能手機的流動數據已打開。 關閉智能手機的流動數據，並使用 Wi-Fi 網絡註冊電器。
	無線網絡名稱 (SSID) 的設定不正確。 無線網絡名稱 (SSID) 應為英文字母與數字的組合。(請勿使用特殊字元。)
	路由器頻率不是 2.4 GHz。 僅支援 2.4 GHz 路由器頻率。將無線路由器設定為 2.4 GHz，並將電器連接至無線路由器。如需了解路由器頻率，請諮詢您的互聯網服務供應商或路由器製造商。
	電器與路由器間的距離過遠。 如電器與路由器間的距離過遠，訊號強度可能會變弱，且可能未正確配置連接。請移動路由器位置，讓其更靠近電器。

備註

