

 
## Instruction Manual for Wall Heater (Model: AWH-2700)

### IMPORTANT SAFETY PRECAUTIONS

- Children under the age of 3 must be kept away from the wall heater unless they are under continuous supervision.
  - CAUTION: Some parts of this appliance can become very hot and may cause burns. Special attention should be given to children and vulnerable people.
  - If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid any hazards.
  - CAUTION: To avoid overheating, do not cover the appliance. This symbol indicates that the appliance should not be covered.
  - The wall heater must not be positioned directly below a power socket.
  - The wall heater should be installed at least 1.8 meters above the floor.
  - Do not use the appliance near a bathroom, shower, or swimming pool.
- 

### Installation of the Wall Heater

1. Drill two holes in the wall 1.8 meters above the ground. The diameter of the hole should match the size of the wall plug.
2. Insert the wall plugs and secure them with screws.
3. Ensure the wall plugs are firmly in place, then hang the wall heater on the wall as shown in the diagram below.

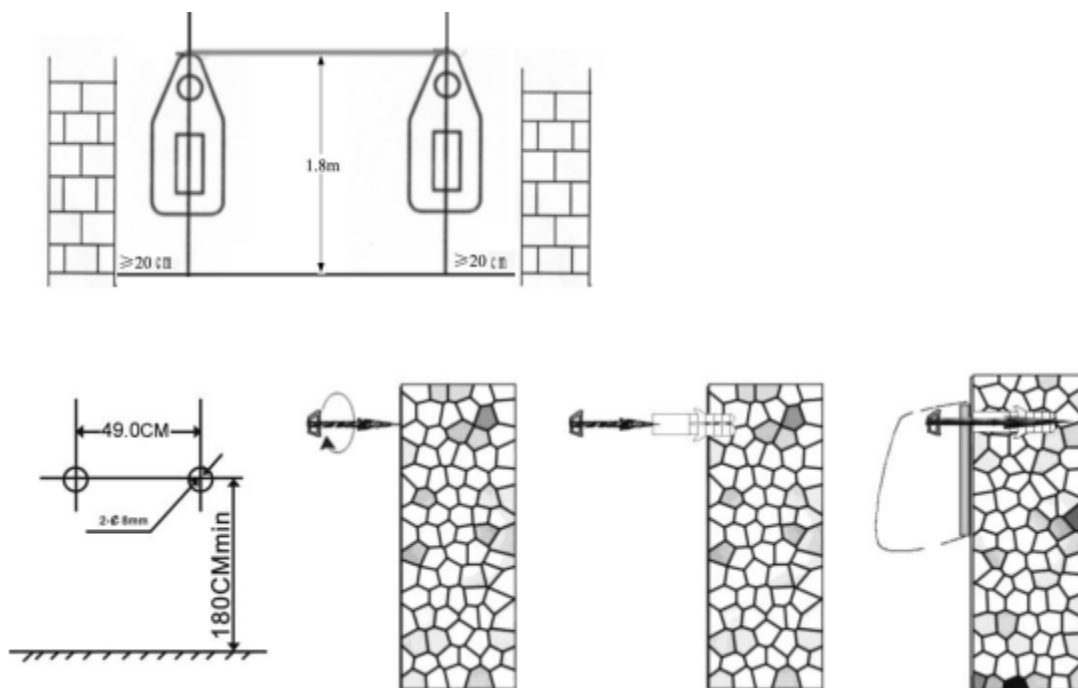


---


## Operation of the Appliance and Remote Control
 
### Control Panel

1. Turn on the appliance by pressing the main button "0/I" to enter standby mode. The display will show "S."

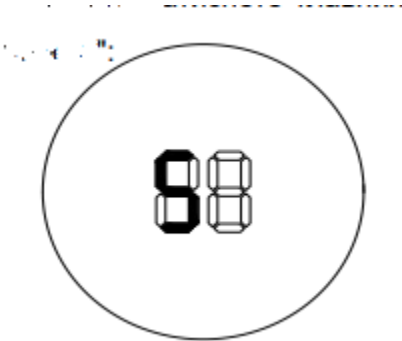

 2. Press the "F" button to toggle between modes:
  - First press: Fan mode (Image A).
  - Second press: Low heating mode (Image B).
  - Third press: High heating mode (Image C).
  - Fourth press: Return to standby mode.

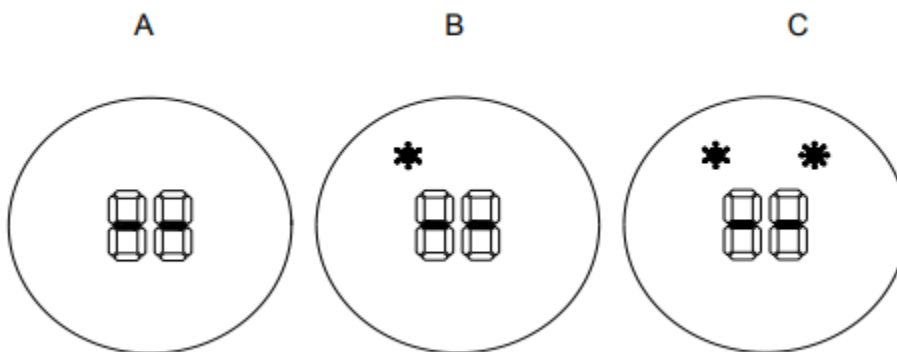

3. Press the "Timer" button to set the timer (from 00 to 12 hours) while the appliance is operating. Each press increases the timer by one hour. After setting the timer, the display will show the current time for 5 seconds before reverting to the previous view, while the timer indicator light will remain on.



## Temperature Setting

- During operation, press the "+" or "-" button to adjust the temperature (default: 23°C, range: 10–49°C). For example, if the current room temperature is 15°C and the desired temperature is 25°C, the display will indicate this setting.
- To cancel the set temperature, press the "F" button or use the remote control to switch to low or high heating modes.

## Remote Control Operation

- Ensure the remote control is directed towards the receiver on the appliance during operation.
- Use the remote to:
  1. Turn the heater and fan on or off.
  2. Toggle between low and high heating modes.
  3. Set the timer (same functionality as the control panel).
  4. Adjust current time/day settings.
  5. Set weekly programs and temperature adjustments.

## Weekly Program Setting (via Remote Control Only)

1. Enter working mode by pressing the "Power" button.
2. Follow instructions to set the current day and time.
3. Press the "P" button to enter weekly programming mode.
4. Select specific days (Monday–Sunday: d1–d7) and set up to six time intervals per day.
5. Define the start and stop times and desired temperature for each interval.
6. Confirm settings. To deactivate the weekly program, press "P" again.

## Open Window Detection Function (Remote Control Only)

1. Activate the appliance and press the "Window Detection" button. Set the target temperature. If the room temperature drops by 5–10°C within 10 minutes, the appliance will automatically enter standby mode. To resume operation, press the "Power" button.

---

## Cleaning and Maintenance

1. If the heater will not be used for an extended period, clean its surface and store it in its box in a ventilated, dry area. Avoid moisture and pressure on the box.
2. Before cleaning, let the appliance cool and unplug it. Use a damp cloth or mild cleaner. Do not immerse the appliance in water or use harsh chemicals.
3. Inspect the ventilation outlets for any obstructions before reuse.

### **Environmental Considerations**

- Do not dispose of electrical appliances as unsorted household waste. Use designated collection facilities for recycling.
  - Contact local authorities for information on proper disposal methods to prevent environmental contamination.
- 

### **Specifications**

- Brand/Model: AYCO, AWH-2700
- Voltage: 220–240V
- Frequency: 50Hz
- Power: 1000/2000W

### **Contact Information**

- Manufacturer: ZORA M.M.S. Ltd.
  - Address: Sofia, Chepinsko Shose 15, Bulgaria
- 

### **IMPORTANT NOTICE**

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities unless supervised by someone responsible for their safety.
- Children must not play with the appliance.
- Do not cover the appliance under any circumstances to prevent overheating.