

**CROWN®**  
Модел/Model: GR-2530

Комбиниран уред -  
Блендер с пасатор

**CROWN®**  
Модел/Model: GR-2530

HAND BLENDER  
3 IN 1



## OPERATING INSTRUCTIONS AND ACCESSORIES

### 1. Mix and puree with the metal knife

- Assemble the unit as shown in fig. 1 without using too much force.

Figure.1

- Connect the device to the mains.
- Use a deep bowl to prevent splashing and to achieve better results when working with the appliance.
- Do not use the appliance in an empty bowl or outside the bowl.
- Divide the products into smaller portions and move the appliance up and down in the bowl after you have selected the appropriate speed for operation.
- Do not press the device with excessive force on the processed ingredients
- You can mix or puree any ingredients with your appliance, including baby food, soups, fruit smoothies, cooked vegetables.
- When you have finished working with the appliance, rinse only the metal part with warm water and dry using a soft cloth.

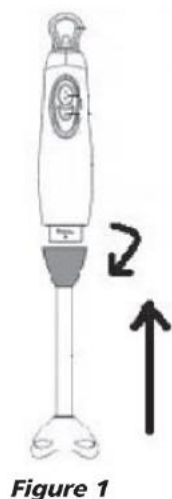


Figure 1

### 3, Using a blender

- Wash and rinse the blender bowl and blade with detergent and water. Hold the knife only by the plastic part!
- Place the knife and then the products as described in table 1.
- Place the lid on the blender and rotate as shown in Figure 3 without using excessive force.
- Turn on the appliance.
- Use one of the buttons, depending on the hardness and quantity of the products you will process.
- After finishing work, disconnect the device from the electrical network.
- ALWAYS use a plastic spoon when cleaning the knife from build-up.
- A change in the color of the plastic may be noticed if colored products such as carrots are processed. Clean with vegetable oil to remove staining.

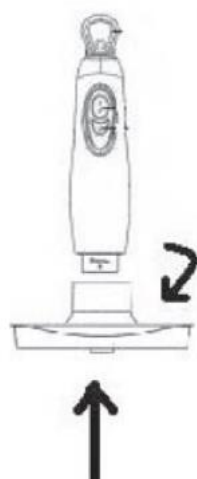


Figure 3

Figure 3

- Clean the blender blade under running water and wipe with a soft cloth.

FOOD	MAXSIMUM	OPERATING TIME	QUANTITY
Meat	300 g	30 sec	3 cm cupe
Vegetable	150 g	15 sec	
Nuts	300 g	25 sec	
Cheese	300 g	20 sec	3 cm cupe
Bread	250 g	30 sec	3 cm cupe
Onions	300 g	20 sec	5 cm cupe
Biscuits	250 g	25 sec	
Soft Fruits	400 g	20 sec	3 cm cupe
Eggs	6 pcs	20 sec	
Strawberry+ Bananas+Milk	500 ml 400 ml	15 sec 20 sec	
Ice			2-3 cm square

### Parts:

- A) Hanger
- B) Turbo Speed button
- C) Normal Speed button
- D) Main body (Motor housing)
- E) Chopper bowl handle
- F) 1000 ml volume Chopper bowl
- G) Non-Slip rubber base
- H) Metal Shaft with stainless steel blade
- I) Chopper gear unit



### SAFETY WARNINGS

1. This appliance is intended for home use only and not suitable for heavy duty operation.
2. Not suitable for children. Supervision is required when the appliance is operated by the children, the elderly or disabled persons.
3. Unplug the appliance after usage, prior to attaching accessories, cleaning and maintenance.
4. Do not use abrasive cleaning materials or chemicals for cleaning the appliance.
5. Store this device away from heat sources such as stoves, ovens or heaters.
6. Do not unplug the appliance from an outlet when your hands are wet.
7. Operating voltage of this appliance is 220-240 volts. Check for voltage compatibility prior to plugging to an outlet.
8. Do not pull the cord when unplugging from an outlet. Handle from the plug.
9. Do not operate the appliance under these circumstances: if the device is visibly damaged as a result of falling and/or not functioning properly. Do not operate or attempt to repair the appliance under these circumstances.
10. Use only the approved brand accessories or spare parts.
11. Do not attach accessories of other products.

### Technical features:

- Voltage : VA/C 220-240 V / 50/ 60 Hz
- Power : 400 Watt
- 1000 ml measurement chopper cup

# CROWN®

Комбиниран уред -  
Блендер с пасатор

**CROWN®**  
Модел/Model: GR-2530

HAND BLENDER  
3 IN 1



## ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ И АКСЕСОАРИ

### 1. Бъркане и пасиране с металният нож

- Сглобете уреда, както е показано на фиг. 1, без да използвате прекалено голяма сила.

#### Фигура.1

- Включете уреда в ел. мрежа.
- Използвайте дълбока купа за да се предпазите от разплискване и за постигане на по-добри резултати от работата с уред.
- Не използвайте уреда в празна купа или извън купата.
- Разделяйте продуктите на по-малки порции и движете уреда нагоре-надолу в купата, след като сте избрали подходящата скорост за работа.
- Не натискайте уреда с прекомерна сила върху обработваните съставки
- Вие можете да разбъркате или пасирате всякакви съставки с вашият уред, в това число детски храни, супи, плодови коктейли, сготвени зеленчуци.
- Когато приключите работа с уреда, изплакнете само металната част с топла вода и подсушете, използвайки мека кърпа.

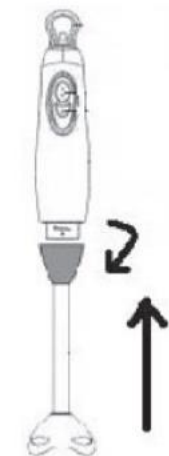


Figure 1

### 3, Използване на блендер

- Измийте и изплакнете купата и острието на блендера с препарат за измиване и вода. Дръжте ножа само за пластмасовата част !
- Поставете ножа, а след това продуктите както са описани в таблица 1.
- Поставете капака на блендера и завъртете, както е показано на **Фигура 3**, без да използвате прекомерна сила.
- Включете уреда.
- Използвайте един от бутоните, в зависимост от твърдостта и и количеството на продуктите, които ще обработвате.
- След като приключите работа, изключете уреда от ел.мрежа.
- ВИНАГИ използвайте пластмасова лъжица, когато почиствате ножа от натрупани продукти.
- Може да се забележи промяна в цвета на пластмасата, ако се обработват цветни продукти като моркови например. Почистете с растително олио, за да премахнете оцветяването.



Figure 3


#### Фигура 3

- Почистете острието на пасатора под течаща вода и избършете с мека кърпа.

ХРАНА	МАКСИМУМ	ВРЕМЕ НА РАБОТА	КОЛИЧЕСТВО
Месо	300g	30 sec	3 см купа
Зеленчуци	150g	15 sec	
Ядки	300g	25 sec	
Сирене	300g	20 sec	3 см купа
Хляб	250g	30 sec	3 см купа
Лук	300g	20 sec	5 см купа
Бисквити	250g	25 sec	
Меки плодове	400g	20 sec	3 см купа
Яйца	6 pcs	20 sec	
Ягоди+банани+мляко	500ml 400ml	15 sec 20 sec	
Лед			2-3 см кубчета

#### Части:

- A) Халка за закачане
- B) Бутон Турбо
- C) Бутон Нормална скорост
- D) Тяло на уреда (съдържа мотор)
- E) Дръжка на купата
- F) 1000 ml купа
- G) Напльзгаща се база
- H) Метален накрайник с нож от неръждаема стомана
- I) Капак на купата

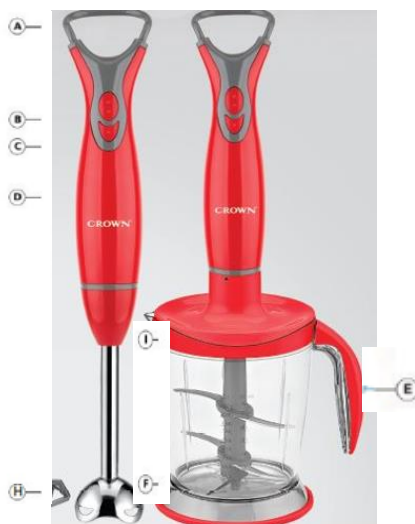

#### Предупреждения за безопасност

1. Този уред е предназначен за домашна употреба и не е подходяща за тежки операции.
2. Този уред не е предназначен за използване от лица (включително деца) с ограничени физически, сетивни или умствени способности, или с недостатъчен опит и познания, освен ако те са наблюдавани или инструктирани относно използването на уреда от лице, отговорно за тяхната безопасност.
3. След приключване на работа с уреда, изключете от ел.мрежа, както и когато сваляте аксесоари, преди почистване и поддръжка.
4. Не използвайте абразивни материали или химикали при почистване на уреда.
5. Съхранявайте уреда далече от източници на топлина, като камини, печки или нагреватели.
6. Не изключвайте уреда от ел.мрежа, когато сте с мокри ръце.
7. Работното напрежение е 220-240 волта. Моля, уверете се, че мрежата в дома ви е със същото напрежение преди да включите уреда.
8. Не дърпайте кабела, за да изключите уреда от контакта. Винаги дръжте щепсела за да изключите.
9. Не използвайте уреда в тези случаи: Ако уред е видимо повреден в резултат на падане или не работи правилно. Не се опитвайте да поправите уреда, обърнете се към квалифициран техник.
10. Използвайте само предоставени от производителя аксесоари.
11. Не поставяйте аксесоари от други продукти.

Технически спецификации:

- Напрежение : VA/C 220-240 V / 50/ 60 Hz
- Мощност : 400 Watt
- 1000 ml купа за пасатор