Rohnson®

INNOVATE FOR LIFE





Thank you for buying a Rohnson cordless stick vacuum cleaner with digital brushless motor (BLDC)

MAMBA comfort

Cleaning filters

EN:
WARNING!!! For your product's better performance, PLEASE CLEAN THE FILTERS REGULARLY (see the section "CLEANING AND MAINTENANCE")

ΕΛ:
ΠΡΟΕΙΔΟΠΟΙΗΣΗ!!! Για τη βέλτιστη απόδοση της συσκευής σας, ΠΑΡΑΚΑΛΟΥΜΕ ΚΑΘΑΡΙΖΕΤΕ ΤΑ ΦΙΛΤΡΑ ΤΑΚΤΙΚΑ (δείτε την ενότητα "ΚΑΘΑΡΙΣΜΟΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗ").

BU:
ВНИМАНИЕ!!! За по-добра работа на уреда, МОЛЯ, РЕДОВНО ПОЧИСТВАЙТЕ ФИЛТРИТЕ (вижте раздела „ПОЧИСТВАНЕ И ПОДДРЪЖКА")

RO:
ATENȚIE!!! Pentru o performanță mai bună a produsului, CURĂȚAȚI FILTRELE ÎN MOD REGULAT (consultați secțiunea „CURĂȚARE ȘI ÎNTREȚINERE").

CZ:
UPOZORNĚNÍ!!! Pro lepší výkon vašeho výrobku PROSÍM PRAVIDELNĚ ČISTĚTE FILTRY (viz část „ČIŠTĚNÍ A ÚDRŽBA")

SK:
UPOZORNENIE!!! Pre lepší výkon vášho výrobku PROSÍM PRAVIDELNE ČISTITE FILTRE (viď časť „ČISTENIE A ÚDRŽBA")

SAFETY INSTRUCTIONS

The vacuum cleaner is specially used for household purpose, please do not use it for commercial or other purposes.

1. Please don't use the vacuum cleaner to suck detergent, kerosene, glass waste, needles, cigarette ash, moisturized dust, sewage, matches, similar articles or any liquid.
2. Please do not use the vacuum cleaner to suck cement, gypsum powder, wall power and similar small particles, or toy, paper filler and other larger objects, which can cause vacuum cleaner clogging, motor burnout and another fault.
3. Please do not use the vacuum cleaner near fire source and other high temperature places.
4. When the vacuum cleaner is used, please pay attention to install HEPA and rolling brush properly before operating the unit.
5. When the vacuum cleaner is used, please note that the suction inlet cannot be clogged and rolling brush cannot be blocked, otherwise motor failure may be caused.
6. Please do not dump or splash water or other liquid into the machine, to avoid short-circuit and burn-out of machine.
7. When cleaning the vacuum cleaner filters, please remove and wash them with water **if recommended by the manufacturer**; when you need to use them, please install the dried filters into the vacuum cleaner. Do not use the wet filters, otherwise it may burn out the machine due to the short-circuit.
8. Please use dry cloth for cleaning vacuum cleaner, do not use gasoline, banana oil etc. otherwise shell cracking or fading will be caused. Please do not use and store the machine in extremely adverse conditions, such as extreme temperature. Use the vacuum cleaner in room temperature of 5°C~ 40°C. Please store it in a cool and dry place. Sunlight exposure for long time should be prohibited.
9. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.
10. Do not use the device if it has been dropped or if there are any visible signs of damage.
11. Do not try to repair the appliance by yourself. Contact our official technical support service.
12. Do not use any accessory that has not been recommended by the manufacturer, as they might cause injuries or damage.
13. Turn off and unplug the appliance from the mains supply when it is not going to be used for a long period of time, before cleaning or repairing, before attaching components and before removing the battery.
14. Never modify the charger in any way.
15. Do not use any battery that has not been provided with the original product.
16. The appliance is not intended to be used by children under the age of 12. It can be used by children over the age of 12, as long as they are given continuous supervision.
17. This appliance is not intended to be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety and understand the hazards involved.
18. Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

BATTERY INSTRUCTIONS


-This appliance includes Li-ion batteries, do not incinerate or expose them to high temperature, as they may explode.

-Leaks from the battery or battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets into contact with skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.

-Avoid contact between the battery and small metallic objects such as paper clips, coins, keys, nails or screws.


-Before a new battery is used or the battery is used for the first time after long-term storage, fully charge the battery. When the device is stored and not used for long periods of time, ensure that the battery pack is fully charged and ensure that the battery is charged and discharged at least once every three months.

PRODUCT COMPONENTS

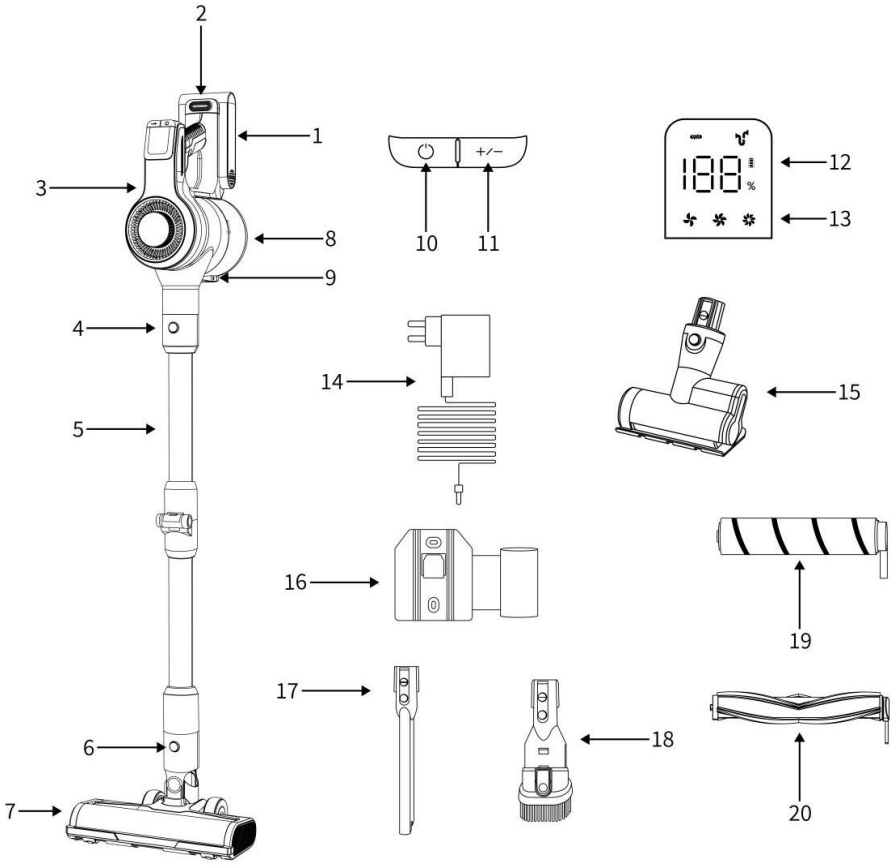

1.Detachable battery pack
2.Battery pack release button
3.Main Body
4.Metal tube release button
5.Foldable tube
6.Motorized floor brush release button
7.Main motorized brush with 2 rollers
8.Dust cup
9.Dust cup cover release button
10. On/off button
11.Speed control button
12.Battery Status Indicator
13.Adjust power level（3 levels）
14.Adapter
15.Mini motorized brush
16.Wall mount base
17.Crevice tool
18.2 in 1 brush tool
19.Soft roller
20.Bristle roller

TOUCH SCREEN DESCRIPTION

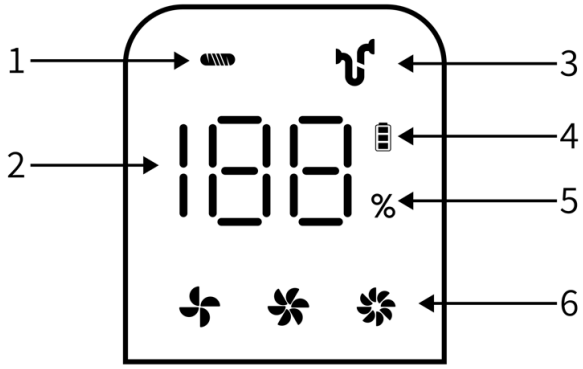

1.Brush blocked warning icon
2.Power percentage display
3.Air path blocked warning icon
4.Battery status Indicator
5.Percent sign
6.Speed mode indicator light

BEFORE FIRST USE

Unpacking the appliance and disposing of the emballagic elements



✓Remove all packing material around the appliance and the protective elements inside the appliance compartments.

- Carton board and sheets of paper are recyclable. They must be thrown in the collection bins provided for this purpose.
- Materials bearing the symbol ♺ are recyclable:
  > PE <= polyethylene; > PS <= polystyrene; > PP <= polypropylene

This means that they can be recycled by depositing them into appropriate collection containers.

- Other packaging elements (adhesive, fasteners, etc.) must be disposed of with household waste.

CHARGING THE BATTERY


The vacuum is powered by the built-in lithium battery. Before first use, charge the battery for at least 6 hours.
During the work of the machine, when the power display is only 10%, the power display will flash. This is a reminder that the battery is low and should be charged in time to avoid affecting the use.
You can charge the battery in two ways - see below Method 1 & Method 2
The vacuum cannot work while charging.

The vacuum cannot be charged when the ambient temperature is below 10°C/50°F or above 45°C/113°F.

Charging Methods

Method 1:


Plug adapter into charging port and then plug the other side of the adapter into the power outlet.The digital screen will be showed the charging process, when at 100%, the battery is full.

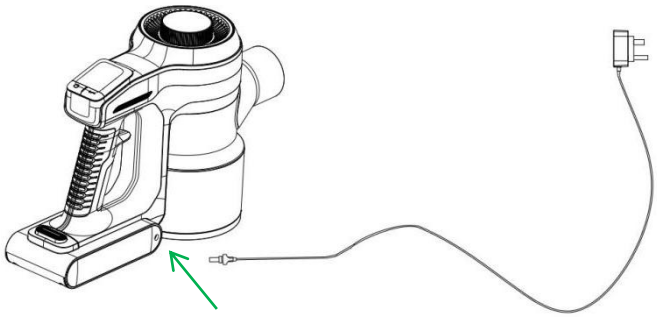

Charging port

Method 2:

The battery package can be pulled out and charged separately. The battery indicator light will be flashing in green, When the battery is fully charged, the green light is on for 5 seconds and then off

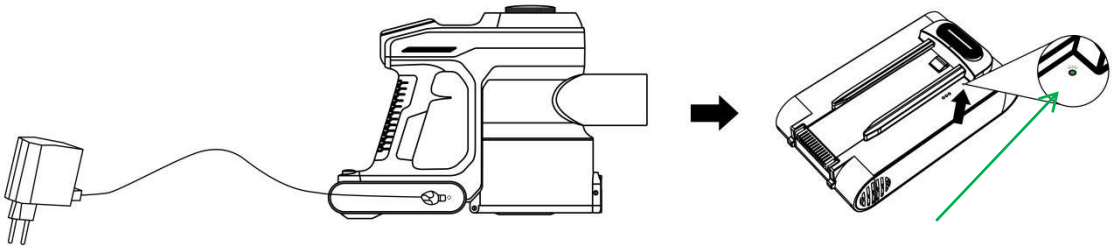

Battery indicator light

Note:

1. Charge the battery before the first use.
2. It is better to charge the battery fully in the first 3 times.
3. Do not charge the battery for extended periods, as this may damage the battery.


ASSEMBLING/DISASSEMBLING

Install the foldable tube to the main body until a click sound is heard (1)
Press the foldable tube release button and remove it (2)



(1) (2)


Install the motorized brush on the end of the tube until a click is heard (1)
Press the motorized floor brush release button to remove it (2)

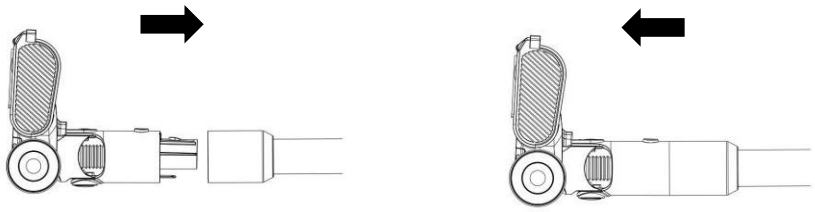

(1) (2)

Cleaning Accessories

- Motorized floor brush: Suitable for rugs and hard floors.
- Long crevice tool: for cleaning the trash in the corners, gaps, baseboard edges, and other hard-to-reach places.
- 2 in 1 brush tool: Use the brush to clean upholstered surfaces, keyboards, lamps, curtain, blinds, vents, etc. Perfect for cleaning hair and dust inserted on the fabric. Use the crevice portion to do the ordinary cleaning task. To switch between brush and crevice portion, press the button on the accessory and slide brush up or down.

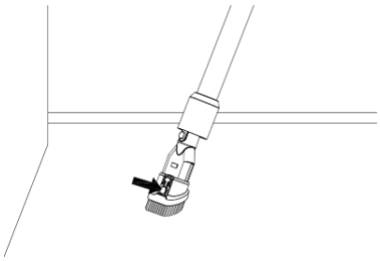

Select the appropriate accessory to use according to different cleaning task. EN

- Mini motorized brush: Suitable for scenarios such as sofas and beds.

INDICATOR LIGHTS

(A)during charging

During the charging process, the battery's power level increases and the battery icon will flash. When it's fully charged, the screen will remain on for 5 seconds before turning off.



(B)During discharging or running.

During discharge or usage, the battery power decreases. If the battery level drops to 10%, the battery status Indicator flashes, please charge it.



(C) When the indicator flickers, check whether the brush roller is blocked




(D)When the indicator flickers, check whether the air inlet path is blocked




OPERATION METHOD

1.Press the switch button, the machine will start to work. Press the button again to shut down the machine.

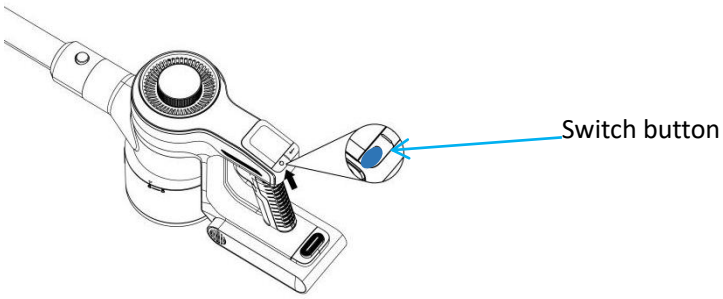

2. You can choose between the different suction power by touching the speed control button. The appliance starts in ECO mode.


When it's Eco suction level (runtime up to 60 min)
Touch once for Middle suction level (runtime up to 28 min)
Touch twice for High suction level (runtime up to 17 min)

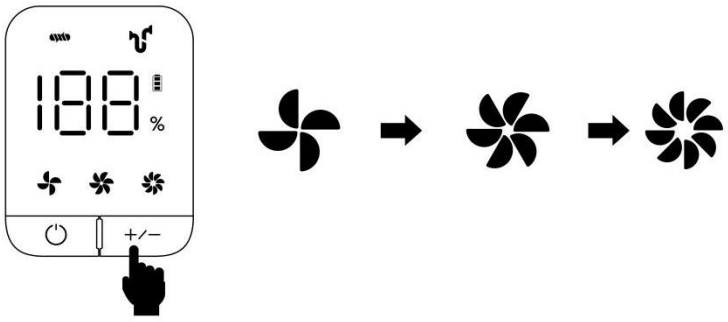


When the machine is working at any suction, press the ON/OFF button, the machine will stop working.

INSTALLATION

Keep the bottom line of wall mount at least 120cm to the floor (1)
Screw fixing then stand the unit on the floor, keep it in the wall mount holder (2)
Complete the installation (3)
Install the accessories (4)

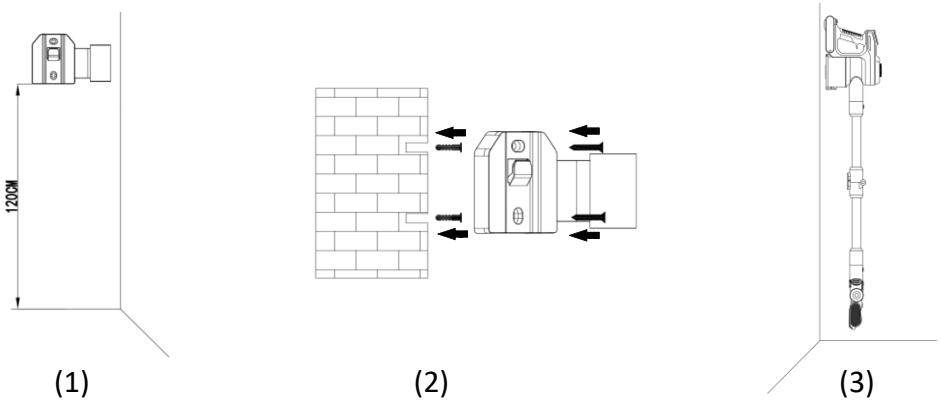

(1) (2) (3)

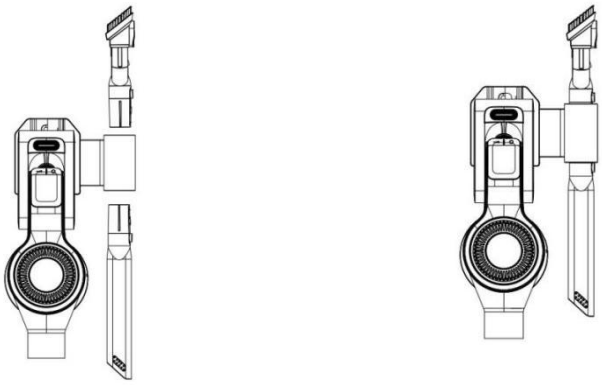


(4)

CLEANING AND MAINTENANCE


When the filters are blocked due to excessive dust, they must be cleaned and if necessary, they can also be replaced. To ensure maximum efficiency, it is suggested to clean the filters regularly, We recommend to clean the filters after every 5 uses. More frequent washing may be required where the user: vacuums fine dust, operated mainly in “max” mode or uses the machine intensively. We recommend to replace the filters at least once a year. Both cleaning and replacement depend on use. More frequent cleaning may be required when vacuuming fine dust or using the machine intensively.

Clean the dust box

Caution! Turn off the vacuum before cleaning it.
If the dust box is filled with dust, the vacuum may stop to prevent overheating.
Clean the dust box before it fills to the MAX line.
Turn the dust cup from 🔒 to 🔓, then remove the dust cup and empty the dust into a trash bin.

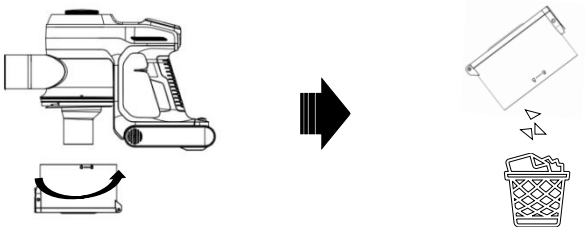


Press the button to open the dust cup cover.

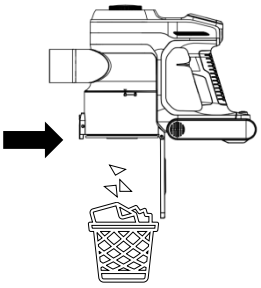


Clean the inner filters


1. Press the dust cup cover release button to release the dust cup.
2. Use crevice tool, lift out the filter mask by twisting count clockwise and pulling out.
3. Then separate the HEPA filter from the filter mask by twisting count clockwise and pulling out.

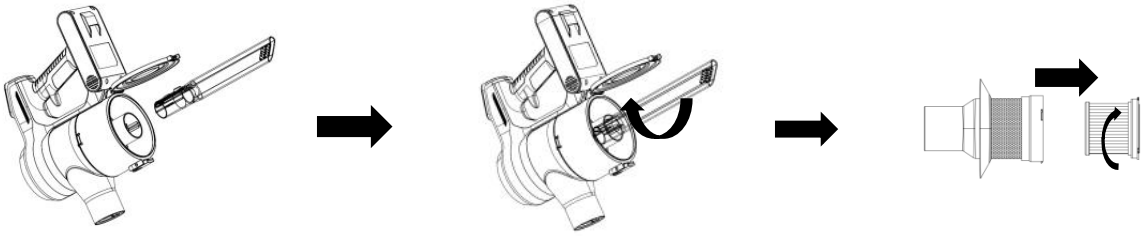

NOTE:

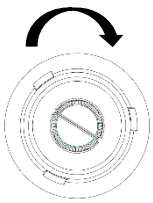



Clockwise to unlock

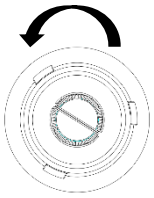

Counter-Clockwise to lock

4. Shake off debris by tapping the filters against your trash bin.
5. Wash the filters with cold water only, under a running tap. Repeat washing the filter until clean water runs. Do not immerse into water.

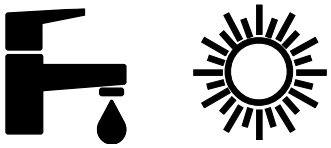

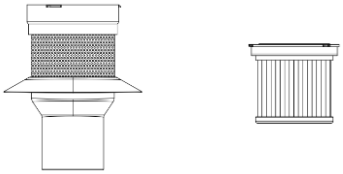


6.Tap the filter to remove any excess water and leave to dry completely. Allow the filters to dry completely in a dry area with good air circulation for at least 24 hours, away from direct sunlight, heat sources like heating appliances etc.
Make sure the filters are completely dry before installing them.


CAUTION: Do not clean the filters in a washing machine.
Do not use a hair dryer to dry them.
Never use the appliance without filters.

Clean the outlet HEPA filter

1.Hold the upper cover and rotate counterclockwise to remove the upper cover and outlet HEPA filter.

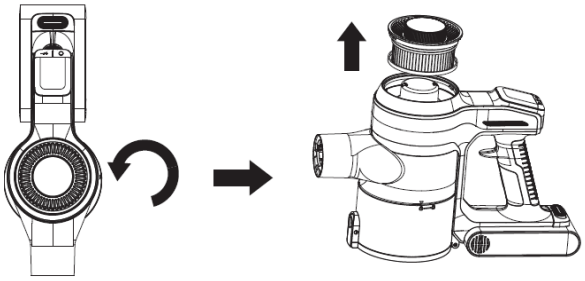

2. The upper cover is rotated clockwise so that the upper cover and HEPA are separated.

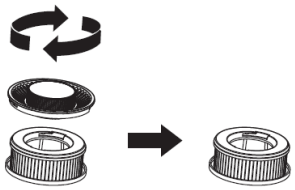


3.Shake off debris by tapping the filters against your trash bin.
4.Wash the filters with cold water only, under a running tap. Repeat washing the filter until clean water runs. Do not immerse into water.
5.Tap the filter to remove any excess water and leave to dry completely. Allow the filters to dry completely in a dry area with good air circulation for at least 24 hours, away from direct sunlight, heat sources like heating appliances etc.
Make sure the filters are completely dry before installing them.


CAUTION: Do not clean the filters in a washing machine.
Do not use a hair dryer to dry them.
Never use the appliance without filters.

Clean the motorized floor brush


1.Turn off the vacuum, press the floor brush release button to remove the floor brush from the metal tube.
2. Push the locking button to the right and take out the roller brush.

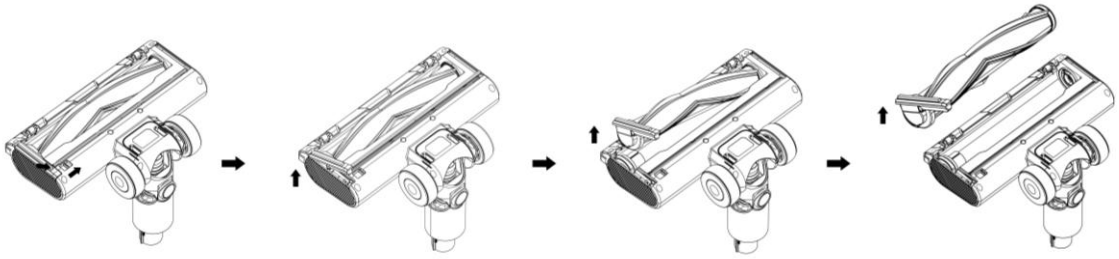


3.Remove the hair and debris around the roller by fingers or knife.

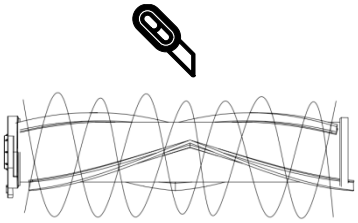


4.Wash the brush roller under running water and completely dry the brush roller before assembling.

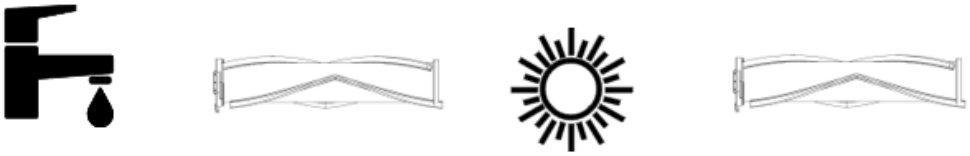

5. Reinstall the rolling brush by installing the clip back.

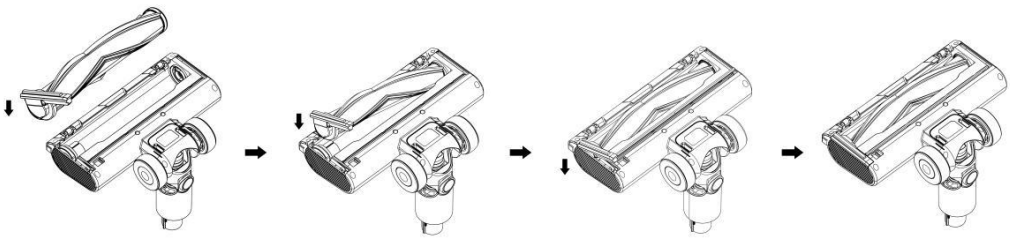

Replace the roller brush

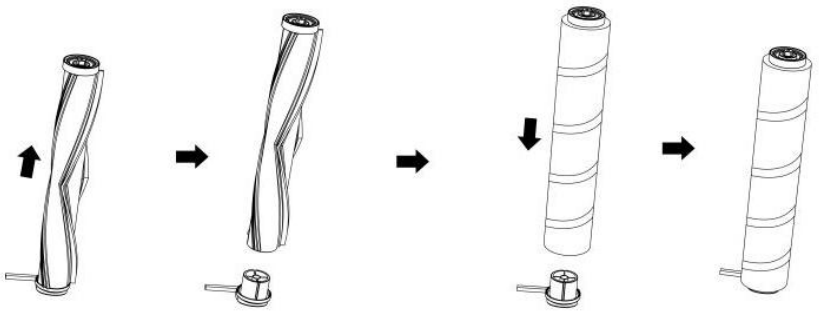

TROUBLESHOOTING

Switch off the appliance and disconnect the mains plug before addressing any faults!
Failure to do so may result in injury or electric shock.

Problem	Possible causes	Solution
Appliance is not working	Battery is empty.	Charge the battery.
	Filters are dirty.	Clean the filters, replace the HEPA filter if necessary.
	Brush roller is blocked.	Clean the brush roller and remove debris such as hair and fibres if necessary.
Battery will not charge	Appliance or charging station is not correctly connected to a power socket.	Connect the mains adaptor correctly to a functioning power socket.
Suction power decreases	Air channel blocked .	Clean the air channel on the hand-held appliance and check the tube for any dirt.
	Dust cup is full.	Empty the dust cup.
	Filters are dirty.	Clean the filters, replace the HEPA filter if necessary.
	Brush roller is blocked.	Clean the brush roller and remove debris such as hair and fibres if necessary.
Vacuum is not picking up debris. No suction or less suction.	Dust cap may be full.	Empty the dust cap.
	Check for blockages.	Clear crevice tool nozzle and floor brush from blockages; remove any string, hair etc that may be wrapped around the rolling brush. Clear connection between the main unit and metal tube from blockages. Clear any debris from metal tub.
	Check filters to see if they need cleaning.	Follow instructions for rinsing and completely airdrying the filters before reassembling.
	Battery is low.	Check the battery indicator lights and recharge if needed.

After the vacuum cleaner is powered on, it will automatically turn off	Check for blockages.	Empty the dust box and clean the filters. Check the metal tube, accessories and openings and remove any blockages.
	Machine is overheated.	Allow the main unit of the vacuum to cool for at least for 4 minutes and restart the vacuum
When the indicator flickers 	Brush roller not inserted correctly/blocked or Flashes red.	Check that the brush roller is correctly fitted and remove any string, carpet fibers or hair that may be wrapped around the rolling brush.
 When the indicator flickers	Battery level is under 10%.	Charge the battery as soon as possible.
When the indicator flickers 	Air channel blocked .	Check the brush rollers, suction tube and suction air channel for dirt/blockages.

TECHNICAL SPECIFICATIONS:
MODEL: Rohnson mamba comfort M52
BATTERY: Li-Ion 21.6V 2500mAh, 6 battery cells
POWER: 365W
DIGITAL MOTOR (BLDC motor)



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.
At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.